

SINGLE-ZONE CEILING-CONCEALED DUCTED HIGH STATIC ENGINEERING MANUAL

Single-Zone Ceiling-Concealed
Ducted High Static Heat Pump Systems
2 to 3 Tons



High Static
LH248HV (24,000 Btu/h)

High Static
LH368HV (36,000 Btu/h)

PROPRIETARY DATA NOTICE

**This document, as well as all reports, illustrations, data, information, and other materials are the property of LG Electronics U.S.A., Inc., and are disclosed by LG Electronics U.S.A., Inc. only in confidence.
This document is for design purposes only.**





A summary list of safety precautions is on page 4.

For more technical materials such as submittals, catalogs, installation, owner's, and service manuals, visit www.lghvac.com.


TABLE OF CONTENTS

Table Of Symbols	3	Indoor Unit Wiring Diagram	27
Unit Nomenclature	4	Electrical Connections	28
LG Air Conditioner Technical Solution (LATS)	5	External Static Pressure	35
Mechanical Specifications	8	Accessories	37
General Data	10	Performance Data	41
Specifications	11	High Static Ducted Cooling Capacity Tables	41
Electrical Data	12	High Static Ducted Heating Capacity Tables	43
Functions, Controls, and Options	13	High Static Ducted Maximum Heating Capacity Tables	45
Indoor Unit	13	Equipment Selection Procedure	48
Outdoor Unit	14	Placement Considerations	50
Outdoor Unit Dimensions	15	Indoor Unit	50
Indoor Unit Dimensions	17	Outdoor Unit	53
Acoustic Data	19	Clearances	59
Sound Pressure for Outdoor Units	19	Installing Outdoor Units Indoors	62
Sound Power for Outdoor Units	20	Refrigerant Piping Design	64
Sound Pressure for Indoor Units	21	Design Guideline Summary	64
Outdoor Unit Refrigerant Flow Diagram	22		
Indoor Unit Refrigerant Flow Diagram	23		
Outdoor Unit Wiring Diagram	25		

TABLE OF SYMBOLS

 DANGER	<i>This symbol indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</i>
 WARNING	<i>This symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</i>
 CAUTION	<i>This symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</i>
Note:	<i>This symbol indicates situations that may result in equipment or property damage accidents only.</i>
	<i>This symbol indicates an action that must not be performed.</i>

UNIT NOMENCLATURE

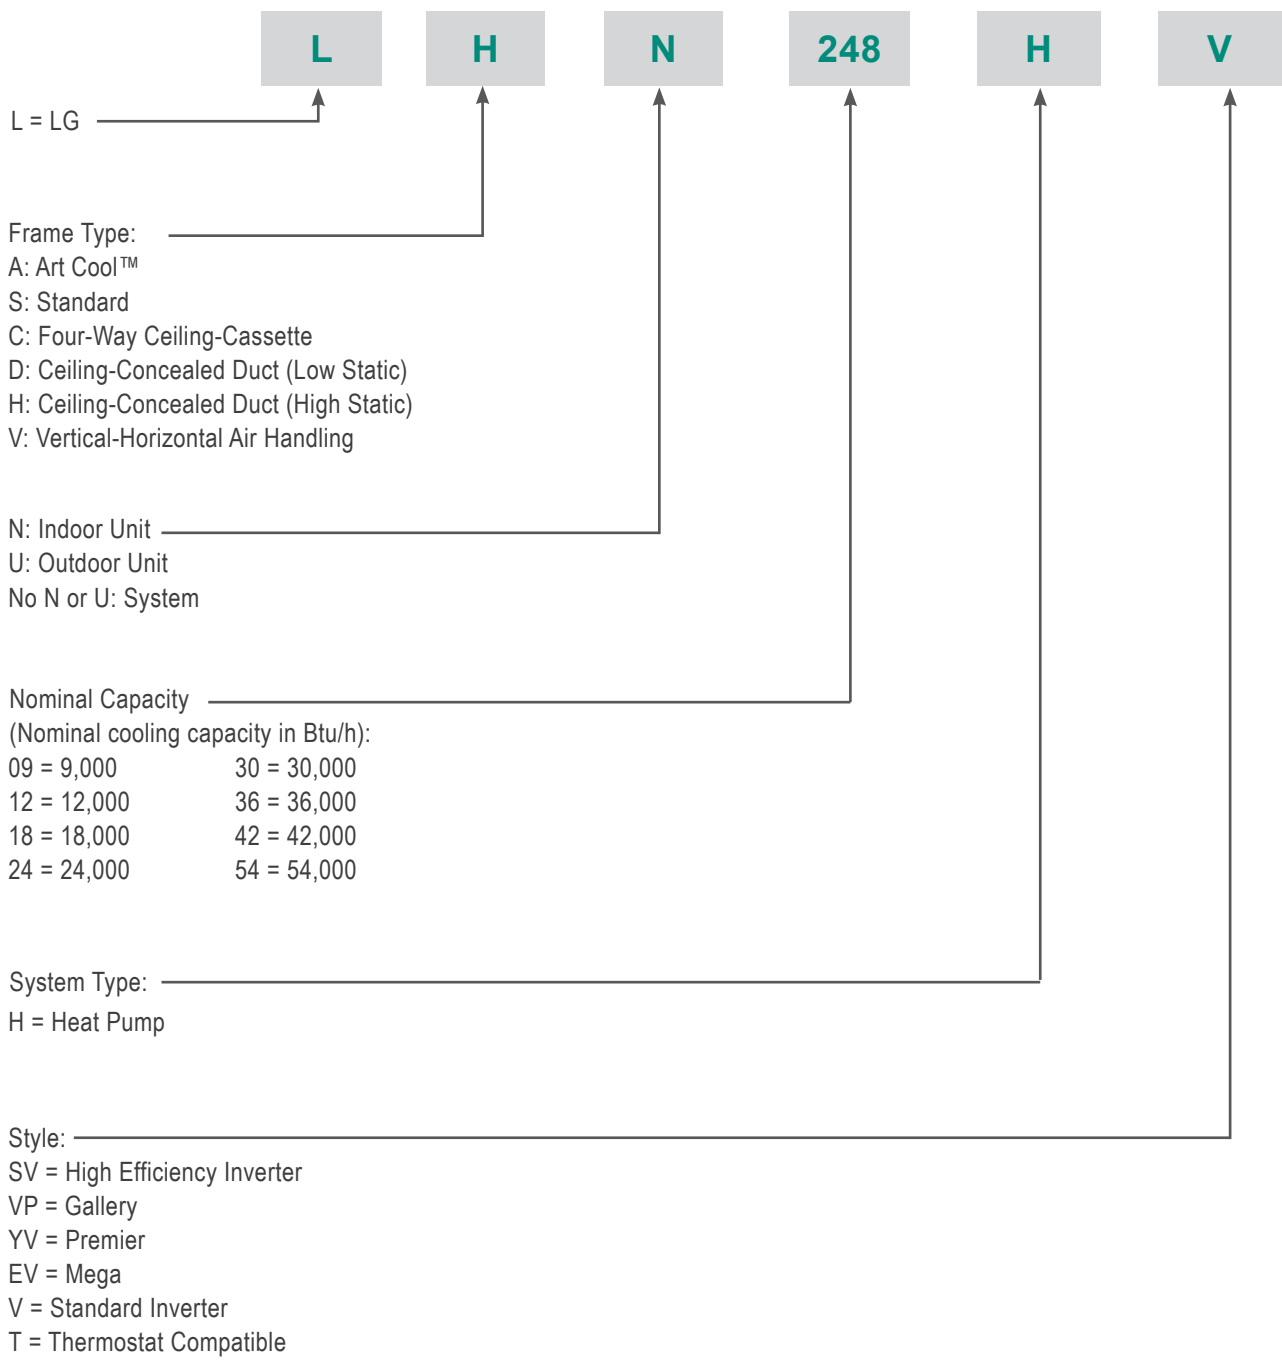

LG AIR CONDITIONER TECHNICAL SOLUTION (LATS)

LG Air Conditioner Technical Solution (LATS) Software

A properly designed and installed refrigerant piping system is critical to the optimal performance of LG air-conditioning systems. To assist engineers, LG offers, free of charge, LG Air Conditioner Technical Solution (LATS) software—a total design solution for LG air conditioning systems. Contact your LG Rep for the best software program for your application.

Note:

To reduce the risk of designing an improper applied system or one that will not operate correctly, LG requires that LATS software be used on all projects.

Formats

LATS is available to LG customers in three user interfaces: LATS HVAC, LATS CAD2, and LATS Revit. All three LATS formats are available through www.myLGHVAC.com, or contact an LG Sales Representative.

LATS HVAC is a Windows®-based application that aids engineers in designing LG Variable Refrigerant Flow (VRF), Multi F / Multi F MAX, Single-Zone, and Energy Recovery Ventilator (ERV) systems.

**Windows® is a registered mark of Microsoft® Corporation.*

LATS CAD2 combines the LG LATS program with AutoCAD® software**. It permits engineers to layout and validate LG Multi V Variable Refrigerant Flow (VRF), Multi F / Multi F MAX, Single-Zone, and Energy Recovery Ventilator (ERV) systems directly into CAD drawings.

LATS Revit integrates the LG LATS program with Revit® software**. It permits engineers to layout and validate Multi V VRF systems directly into Revit drawings.

***AutoCAD® and Revit® are both registered marks of Autodesk, Inc.*

Features

All LG product design criteria have been loaded into the program, making LATS simple to use: double click or drag and drop the component choices. Build systems in Tree Mode where the refrigerant system can be viewed. Switch to a Schematic diagram to see the electrical and communications wiring.

LATS software permits the user to input region data, indoor and outdoor design temperatures, modify humidity default values, zoning, specify type and size of outdoor units and indoor units, and input air flow and external static pressure (ESP) for ducted indoor units.

The program can also:

- Import building loads from a separate Excel file.
- Present options for outdoor unit auto selection.
- Automatically calculate component capacity based on design conditions for the chosen region.
- Verify if the height differences between the various system components are within system limits.
- Provide the correct size of each refrigerant piping segment and LG Y-Branches and Headers.
- Adjust overall piping system length when elbows are added.
- Check for component piping limitations and flag if any parameters are broken.
- Factor operation and capacity for defrost operation.
- Calculate refrigerant charge, noting any additional trim charge.
- Suggest accessories for indoor units and outdoor units.
- Run system simulation.

Note:

Features depend on which LATS program is being used, and the type of system being designed.

Figure 1: Example of LATS CAD2.



LG AIR CONDITIONER TECHNICAL SOLUTION (LATS)

LATS Generates a Complete Project Report

LATS software also generates a report containing project design parameters, cooling and heating design data, system component performance, and capacity data. The report includes system combination ratio and refrigerant charge calculations; and provides detailed bill of material, including outdoor units, indoor units, control devices, accessories, refrigerant pipe sizes segregated by building, by system, by pipe size, and by pipe segments. LATS can generate an Excel GERP report that can imported into the LG SOPS pricing and ordering system.

Proper Design to Install Procedure

LG encourages a two report design-to-install-procedure. After the design engineer determines building / zone loads and other details, the engineer opens the LATS program and inputs the project's information. When the design is complete, the "Auto Piping" and "System Check" functions must be used to verify piping sizes, limitations, and if any design errors are present. If errors are found, engineers must adjust the design, and run Auto Piping and System Check again. When the design passes the checks, then the engineer prints out a project "Shop Drawing" (LATS Tree Diagram) and provides it to the installing contractor. The contractor must follow the LATS Tree Diagram when building the piping system, but oftentimes the design changes on the building site:

- Architect has changed location and/or purpose of room(s).
- Outdoor unit cannot be placed where originally intended.
- Structural elements prevent routing the piping as planned.
- Air conditioning system conflicts with other building systems (plumbing, gas lines, etc.).

The contractor must mark any deviation from the design on the Shop Drawing, including as-built straight lines and elbows. This "Mark Up" drawing must be returned to the design engineer or Rep, who must input contractor changes into the LATS file. (Copy the original LATS software file, save and rename as a separate file, and modify all piping lengths by double-clicking on each length and editing information.) Like the shop drawing, the Auto Piping and System Check must also be run on this new "As Built" drawing. The design engineer or Rep must then provide the final As Built file to the contractor. The Mark Up version must be compared to the As Built version for the following:

- Differences in pipe diameter(s). If incorrect diameters have been installed, the piping must be changed out. If pipe diameters have changed, check to see if Y-Branches will also need to be changed.
- Changes to outdoor unit and indoor unit capacities. Capacities changes may impact line length changes.
- Additional refrigerant charge quantity ("Trim Charge"). Trim charge will change if piping lengths and diameters change. The As Built version must reflect installed piping lengths to ensure correct trim charge.

All documents submitted by the contractor, as well as the Shop Drawing and the As Built Drawing files must be provided for commissioning purposes. Model and serial numbers for all system components must also be submitted. If the steps previously detailed are not followed, and all documents are not provided to the LG Commissioner, the project runs the risk of not being commissioned and voiding any limited warranty LG offers on the equipment.

Figure 2: Example of a LATS Tree Diagram.



CEILING-CONCEALED DUCTED HIGH STATIC UNIT PRODUCT DATA

Mechanical Specifications on page 8

General Data on page 10

Electrical Data on page 12

Functions, Controls, and Options on page 13

Dimensions on page 15

Acoustic Data on page 19

Refrigerant Flow Diagrams on page 22

Wiring Diagrams on page 25

Electrical Connections on page 28

External Static Pressure on page 35

Accessories on page 37

MECHANICAL SPECIFICATIONS

Ceiling-Concealed Ducted High Static System

General

System

LG single zone ceiling-concealed ducted high static system comprises of a single frame outdoor unit connected to a single indoor unit with a single refrigerant circuit. An LG single zone ceiling-concealed ducted system can operate in either cooling or heating mode. The system is capable of changing mode within a maximum time of three (3) minutes to ensure indoor temperature can be properly maintained. LG components are manufactured in a facility registered to ISO 9001 and ISO 14001, which is a set of standards applying to environmental protection set by the International organization for Standardization (ISO). The system components comply with Underwriters Laboratories (UL) 1995 Heating and Cooling Equipment Standard for Safety and bear the CSA label. Wiring in these units are in accordance with the national Electrical Code (NEC). LG single zone ceiling-concealed ducted systems have published performance ratings certified by AHRI (Air-Conditioning, Heating, and Refrigeration Institute) and are listed in the AHRI Standard 210/240 certified product directory.

Outdoor Unit

The outdoor unit has sound levels not exceeding 54 dB(A) tested in an anechoic chamber under ISO Standard 3745.

Indoor Unit

Ceiling-Concealed Ducted units are designed for air volume against an external static pressure up to 0.59"WG for the 24,000 Btu/h and 36,000 Btu/h model.

Temperature Ranges

24,000, and 36,000 Btu/h High Static Operating Ranges

- Operating ranges for outdoor units of 5°F to +118°F (DB) for cooling; -4°F to +64°F (WB) for heating.
- Operating ranges for indoor units of 57°F to 77°F (WB) for cooling; 59°F to 81°F (DB) for heating.
- Indoor unit temperature setting range of 65°F to 86°F (DB) for cooling; 61°F to 86°F (WB) for heating.
- Cooling range can be extended from 5°F down to -4°F using the Low Ambient Wind Baffle Kit (sold separately).

Casing / Frame

Outdoor Unit

The outdoor condensing unit case is constructed from pre-coated metal (PCM) that has been tested in accordance with ASTM B-117 salt spray procedure for a minimum of 1,000 hours. Case has a removable panel to allow access to major internal components, and legs to secure the unit during installation.

Indoor Unit

The indoor unit casing is designed to mount fully concealed above a finished ceiling. Casing is manufactured of galvanized steel plate. Cold surfaces of the unit are covered internally with a coated polystyrene insulating material, and covered externally with sheet insulation made of ethylene propylene diene monomer (M-Class) (EPDM). External insulation is plenum rated and conforms to ASTM Standard D-1418. Hanger brackets are included on the casing to support the weight on four corners. The indoor unit has a front horizontal supply air discharge, and one dedicated rear horizontal return air. The supply air opening is flanged to accept field-installed ductwork that must not exceed the external static pressure limitation of the unit.

Refrigerant System

The system is designed for use with R410A refrigerant, and consists of a single refrigeration circuit. The refrigeration circuit is pressure-tested at the factory and shipped with a holding charge of helium gas. The outdoor unit is provided with factory installed components, including a refrigerant strainer, accumulator, four-way reversing valve, electronic expansion valve (EEV), high and low side charging ports, service valves, and interconnecting piping. All refrigerant lines from the outdoor unit to the indoor unit are field-installed and must be insulated separately.

Figure 3: Ceiling-Concealed Ducted System (LH248HV High Static Model).



MECHANICAL SPECIFICATIONS

Ceiling-Concealed Ducted High Static System

Compressors

The 24,000 Btu/h outdoor unit is equipped with one hermetically sealed, digitally controlled, inverter-driven twin rotary compressor to modulate capacity (modulation in 1 Hz increments). The 36,000 Btu/h outdoor unit is equipped with one hermetically sealed, digitally controlled, inverter-driven scroll compressor to modulate capacity (modulation in 1 Hz increments). Teflon coated bearings, overcurrent protection, and vibration isolation are integrated with the compressor.

Frequency ranges for the 24,000 ~ 36,000 Btu/h outdoor units are:
24k Btu/h = 15 to 80 Hz Cooling; 15 to 100 Hz Heating
36k Btu/h = 10 to 120 Hz Cooling; 10 to 135 Hz Heating

Coil

Outdoor Unit

Heat pump outdoor unit coils are made of nonferrous louvered aluminum fins protected with an integral coil guard. The coil for each outdoor unit has a minimum of 14 fins per inch (FPI); heat exchanger has two rows. The coil fins have a factory applied corrosion resistant GoldFin™ material with hydrophilic coating tested in accordance with ASTM B-117 salt spray test procedure for a minimum of 1,000 hours. Coils are factory tested to a pressure of 551 psig.

Indoor Unit

Indoor unit coils are factory built and are comprised of aluminum fins mechanically bonded to copper tubing. Each indoor unit has a minimum of three rows of coils, which are pressure tested to 551 psig at the factory. Each unit is provided with a factory installed condensate drain pan below the coil.

Fans and Motors

Outdoor Unit

The 24,000 Btu/h (LUU240HV) outdoor unit includes one direct drive, variable speed axial / propeller type fan with a horizontal air discharge; the 36,000 Btu/h outdoor unit (LUU360HV) includes two fans. Fan blades are made of Acrylonitrile Butadiene Styrene (ABS) material, and have a Brushless Digitally Controlled (BLDC) fan motor. The fan motor has inherent protection, permanently lubricated bearings, and variable speed with a maximum speed up to 950 rpm. Raised guards are provided to limit contact with moving parts.

Indoor Unit

The 24,000 Btu/h (LHN248HV) indoor unit has one direct-drive Sirocco fan.

The 36,000 Btu/h (LHN368HV) indoor unit has two direct-drive, Sirocco fans made of high strength ABS GP-2200 polymeric resin.

The fans are statically and dynamically balanced, mounted on a common brushless digitally controlled (BLDC) motor, and mounted on vibration-attenuating rubber grommets. Fan speed is controlled using a microprocessor-based direct digital control algorithm. The indoor fan has Low, Med, High, and Auto settings for Cooling mode; and has Low, Med, High, and Auto settings for Heating mode. The

Auto setting adjusts the fan speed based on the difference between the controller set-point and space temperature.

Air Filter - Indoor Unit

The return air inlet on the indoor unit includes a factory-supplied removable, washable filter that is accessible from the back of the unit. Options include a return filter box that holds a field-provided high efficiency one or two inch MERV-rated filters, and a LG-supplied air cleaner (each sold separately).

Electrical

The system is designed to operate using 208–230 / 60 / 1 power with voltage variances of $\pm 10\%$ and includes overcurrent protection. The indoor unit is powered through the outdoor unit.

Controls

Indoor and outdoor units are factory wired with necessary electrical control components, printed circuit boards, thermistors, sensors, terminal blocks, and lugs for power wiring. Factory installed microprocessor controls in the outdoor unit and indoor unit perform functions to efficiently operate the single zone system, communicating via an 14 AWG four stranded and shielded conductor power/transmission cable. Microprocessor-based algorithms provide component protection, soft-start capability, refrigeration system pressure, temperature, defrost, and ambient control. System can be operated through a simple wired remote controller (required, but sold separately).

Condensate Lift/Pump




The indoor unit is provided with a factory installed and wired condensate lift/pump capable of providing a minimum 27-9/16 inch lift from the bottom surface of the unit. Drain pump has a safety switch to shut off the indoor unit if the condensate rises too high in the drain pan.

GENERAL DATA

Ceiling Concealed Ducted High Static Pairing Table

The following table shows the available outdoor and indoor unit.

Table 1: Ceiling-Concealed Ducted High Static System Pairing Table

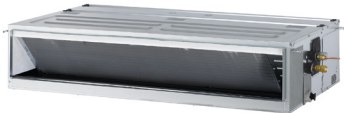Outdoor Unit Model	Indoor Unit Model
High Static	
<div>LUU240HV</div> <div></div>	<div>LHN248HV</div> <div></div>
<div>LUU360HV</div> <div></div>	<div>LHN368HV</div> <div></div>

Note:

The above units require any LG wired remote controller for operation. The LG wired remote controller is sold separately.

GENERAL DATA / SPECIFICATIONS

High Static Ducted

Table 2: Single Zone High Static Ducted System General Data.

Type	Single Zone High Static Ducted	
System (Model) (Indoor Unit / Outdoor Unit)	LH248HV (LHN248HV / LUU240HV)	LH368HV (LHN368HV / LUU360HV)
Cooling Capacity (Min / Rated / Max) (Btu/h)	9,600 ~ 24,000 ~ 27,000	14,400 ~ 36,000 ~ 41,400
Cooling Power Input ¹ (kW)	0.72 ~ 2.05 ~ 4.00	0.72 ~ 3.04 ~ 4.00
EER2 @95°F	11.70	11.85
SEER2	16.85	18.85
Heating Capacity (Min / Rated / Max) (Btu/h)	10,800 ~ 27,000 ~ 30,000	16,000 ~ 40,000 ~ 42,200
Heating Power Input ¹ (kW)	0.58 ~ 2.26 ~ 3.10	0.77 ~ 3.37~ 3.50
COP @47°F	3.50	3.48
HSPF2	9.00	9.2
Power Supply V, Ø, Hz ²	208-230 / 1 / 60	
Power Wiring / Communications Cable (No. x AWG) ²	4 x 14	
Rated Low Heating Capacity (Btu/h)		
Outdoor 17°F (WB) / Indoor 70°F (DB)	17,500	24,000
Low COP @17°F	2.64	2.67
Maximum Heating Capacity (Btu/h)		
Outdoor 17°F (DB) / Indoor 70°F (DB)	26,000	41,500
Outdoor 5°F (DB) / Indoor 70°F (DB)	21,400	33,600
Outdoor -4°F (DB) / Indoor 70°F (DB)	20,760	27,310
Outdoor Unit Operating Range		
Cooling (°F DB)	5 to 118	
Optional Wind Baffle Cooling (°F DB)	Yes (-4)	
Heating (°F WB)	-4 to 64	
Indoor Unit Operating Range		
Cooling (°F WB)	57 to 77	
Heating (°F DB)	59 to 81	
Indoor Temperature Setting Range		
Cooling (°F)	65 to 86	
Heating (°F)	61 to 86	
Unit Data		
Refrigerant Type ³	R410A	
Refrigerant Control	EEV	
Indoor Unit Sound Pressure Level ±1 dB(A) (H/M/L) ⁴	37 / 35 / 34	44 / 42 / 40
Outdoor Unit Sound Pressure Level ±1 dB(A) (Cool/Heat) ⁴	48 / 52	52 / 54
Indoor Unit Net / Shipping Weight (lbs.)	58.6 / 71.9	85.3 / 99.4
Outdoor Unit Net / Shipping Weight (lbs.)	130.1 / 147.7	193.1 / 217.4
Compressor (Type x Qty.)	Twin Rotary x 1	Scroll x 1
Dehumidification Rate (pts./hr.)	5.1	5.9
Fan		
Indoor Unit Type x Qty.	Sirocco x 1	Sirocco x 2
Outdoor Unit Type x Qty.	Propeller x 1	Propeller x 2
Motor / Drive	Brushless Digitally Controlled / Direct	
Airflow Rate		
Indoor Unit (Max. / H / M / L [CFM])	777 / 706 / 636	1,130 / 989 / 848
Outdoor Unit (Max. CFM)	2,048	2 x 1942
IDU Factory Set (High) External Static Pressure (in. wg)	0.24	
ODU Factory Set (High) External Static Pressure (in. wg)	0.1	
Piping		
Liquid (in.) (Connection size / Pipe size)	3/8 / 3/8	
Vapor (in.) (Connection size / Pipe size)	5/8 / 5/8	
Indoor Unit Condensate Drain O.D. / I.D. (in.)	1-1/4, / 1	
Additional Refrigerant Charge (oz./ft.)	0.43	
Pipe Length (Minimum/Maximum, ft.)	16.4 / 164	16.4 / 246
Piping Length (no additional refrigerant, ft.)	24.6	
Maximum Elevation Difference (ft.)	98.4	

EEV: Electronic Expansion Valve, IDU: Indoor Unit, ODU: Outdoor Unit. This unit comes with a dry helium charge.
 This data is rated 0 ft above sea level, with 24.6 ft of refrigerant line per indoor unit and a 0 ft level difference between outdoor and indoor units.
 Cooling capacity rating obtained with air entering the indoor coil at 80°F dry bulb (DB) and 67°F wet bulb (WB); and outdoor ambient conditions of 95°F dry bulb (DB) and 75°F wet bulb (WB).
 Heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB); and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).
¹ Power Input is rated at high speed.

² All power wiring / communication cables from ODU to IDU are field supplied and are to be minimum four-conductor, 14 AWG, stranded, shielded or unshielded (if shielded, it must be grounded to the chassis of ODU only), and must comply with applicable local and national codes.
³ Take appropriate actions at the end of HVAC equipment life to recover, recycle, reclaim or destroy R410A refrigerant according to applicable regulations (40 CFR Part 82, Subpart F) under section 608 of CAA.
⁴ Sound pressure levels are tested in an anechoic chamber under ISO Standard 3745 and are the same in both cooling and heating mode. These values can increase due to ambient conditions during operation.
⁵ Piping lengths are equivalent.

ELECTRICAL DATA

Electrical Data

Table 3: Electrical Data.

Nominal Tons	Unit Model No.	Hertz	Voltage	Voltage Range (Min. to Max.)	MCA	MOP	Compressor Quantity	Compressor Motor RLA (Cooling)	Condenser Fan Motor(s)	
									Condenser Fan Quantity.	Condenser Fan Motor FLA
High Static										
2	LUU240HV	60	208 - 230	187 - 253	20	30	1	13.5	1	1.6
3	LUU360HV				32	40		22	2	1.6 x 2

Voltage tolerance is ±10%.

Maximum allowable voltage unbalance is 2%.

RLA = Rated Load Amps.

MCA = Minimum Circuit Ampacity.

Maximum Overcurrent Protection (MOP) is calculated as follows:
(Largest motor FLA x 2.25) + (Sum of other motor FLA) rounded down
to the nearest standard fuse size.



FUNCTIONS, CONTROLS, AND OPTIONS

Indoor Unit

Functions, Controls, and Options for LHN248HV, LHN368HV

Table 4: Indoor Unit—Functions, Controls, and Options.

Category	Functions	LHN248HV	LHN368HV
Airflow	Air supply outlet	1	1
	Airflow direction control (left and right)	X	X
	Airflow direction control (up and down)	X	X
	Auto swing (left and right)	X	X
	Auto swing (up and down)	X	X
	Airflow steps (fan/cool/heat)	3 / 3 / 3	3 / 3 / 3
	Chaos wind (auto wind)	X	X
	Jet cool/heat	X / X	X / X
	Swirl wind*	X	X
Air Purifying	Triple filter	X	X
	Plasma air purifier	X	X
	Long life prefilter (washable)	O	O
Installation	Drain pump	O	O
	E.S.P. control*	O	O
	Electric heater	X	X
	High ceiling operation	X	X
Reliability	Hot start	O	O
	Self diagnosis	O	O
Convenience	Auto changeover**	O (single only)	O
	Auto cleaning	X	O
	Auto operation (artificial intelligence)	O (multi only)	X
	Auto restart	O	O
	Child lock*	O	O
	Forced operation	X	X
	Group control*	O	O
	Sleep mode	O	O
	Timer (on/off)	O	O
	Timer (weekly)	O	O
	Two thermistor control*	O	O
	Auto elevation grille*	X	X
Network Solution	LGAP	O	O

1. O : Applied, X : Not applied

Accessory model name : Installed at field, ordered and purchased separately by the corresponding model name, supplied with separate package.

2. * : These functions need to connect to the wired remote controller.

3. ** :Auto Changeover function, Telecom shelter controller can be operated when connected with Single A. Auto Operation function can be operated while connected with Mutli F/FDX.

4. For synchro operation, some functions and accessories are not available. Check the outdoor unit's PDB.

√ = Standard feature
o = Unit option



FUNCTIONS, CONTROLS, AND OPTIONS

Outdoor Unit

Functions, Controls, and Options for LUU240HV, LUU360HV

Table 5: Outdoor Unit—Functions, Controls, and Options.

Outdoor Unit			
Category	Functions	LUU240HV	LUU360HV
Reliability	Defrost / Deicing	O	O
	High pressure sensor	X	X
	Phase protection	X	X
	Restart delay (3-minutes)	O	O
	Self diagnosis	O	O
	Soft start	O	O
Convenience	Night Quiet Operation	O	O
	Mode Lock	O	O
	Pump Down (Forced Cooling Operation)	O	O
	Network solution (LGAP)	O	O
Central Controller	AC Smart 5	PACS5A000	PACS5A000
	ACP 5	PACP5A000	PACP5A000
	PI485	PMNFP14A1	PMNFP14A1
Remote Controller	MultiSITE CRC2	PREMTBVC2	PREMTBVC2
	MultiSITE CRC2+	PREMTBVC3	PREMTBVC3
	MultiSITE CRC2+Z	PREMTBVC4	PREMTBVC4
Integration Solution	MultiSITE Communications Manager	PBACNBTR0A	PBACNBTR0A

√ = Standard feature


O = Unit option

X = Not Available

OUTDOOR UNIT DIMENSIONS

Dimensions for LUU240HV


Figure 4: LUU240HV Dimensions.

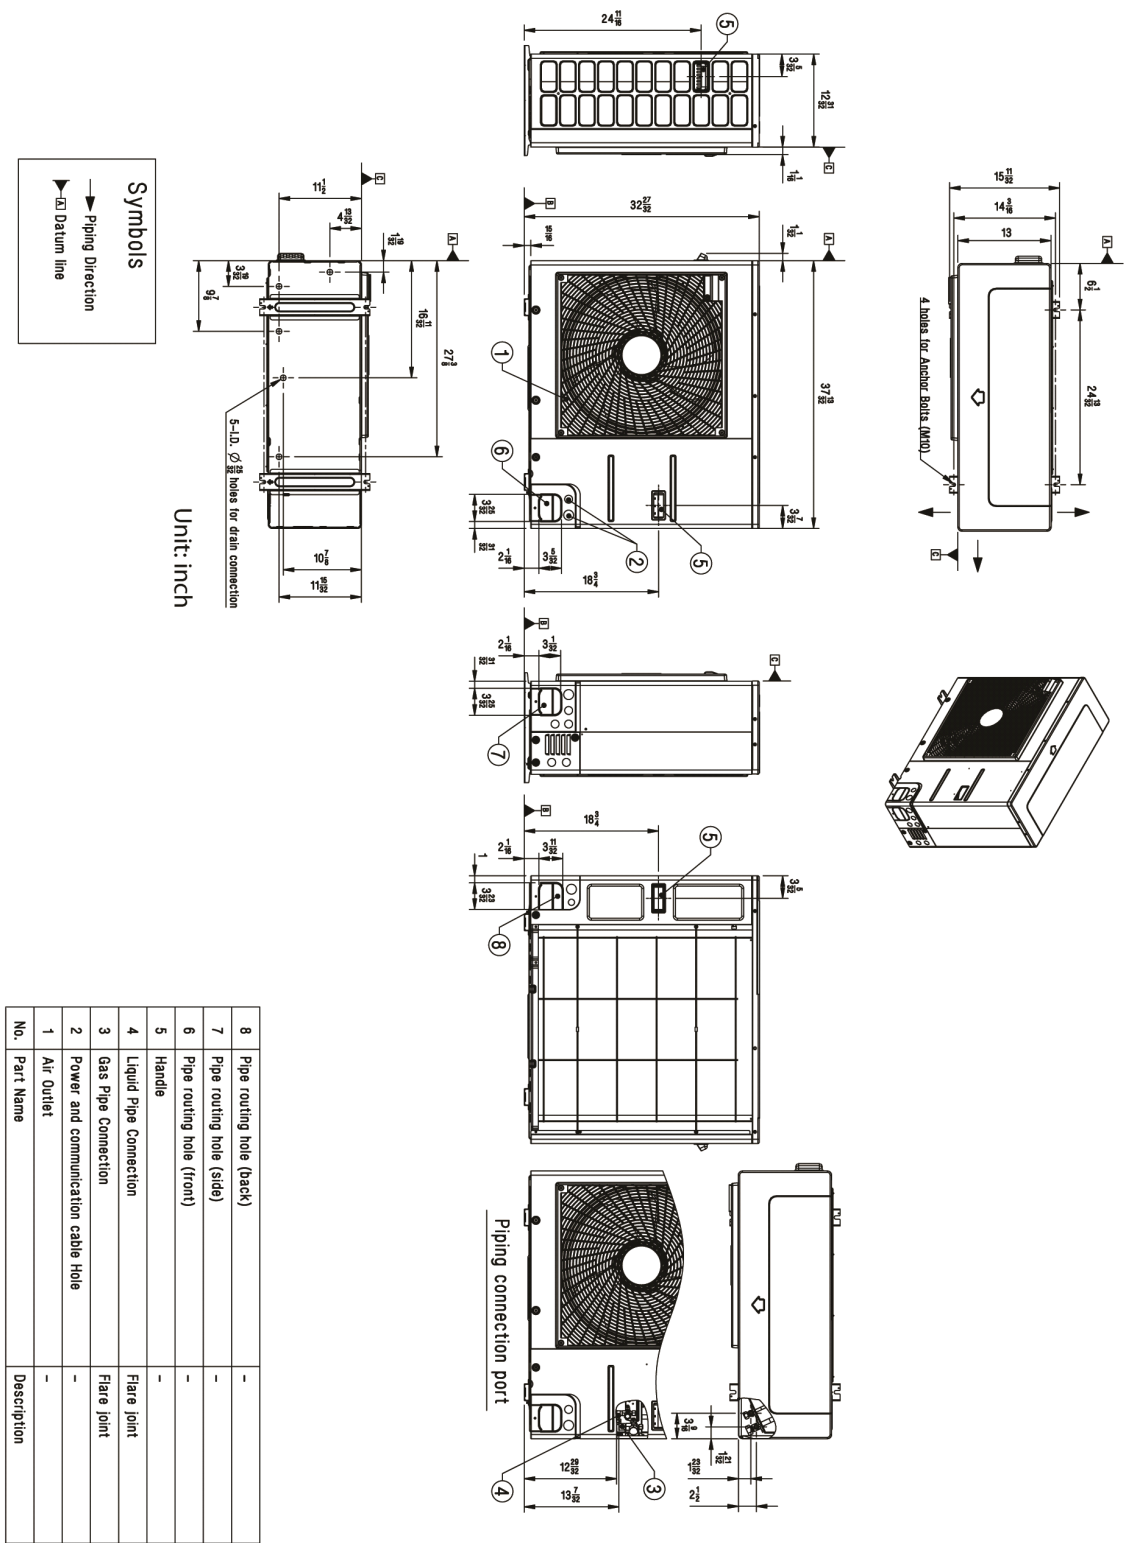

OUTDOOR UNIT DIMENSIONS

Dimensions for LUU360HV


Figure 5: LUU360HV Unit Dimensions.

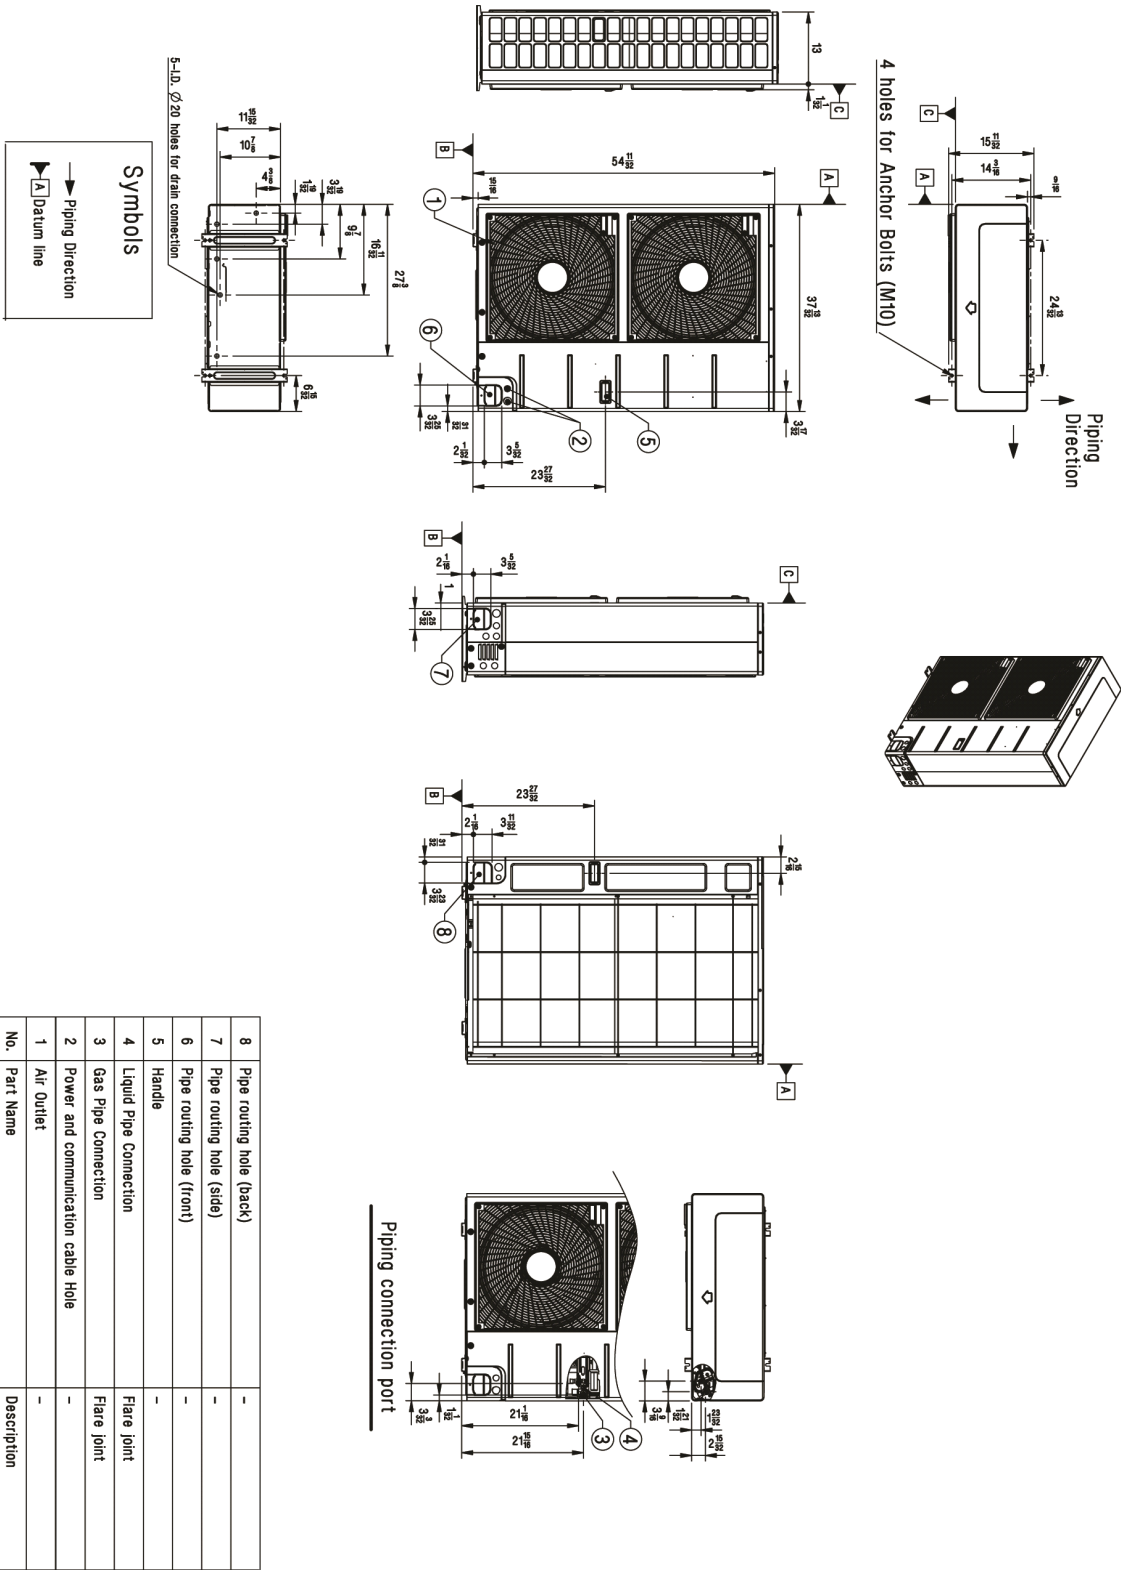

INDOOR UNIT DIMENSIONS

Dimensions for LHN248HV


Figure 6: LHN248HV Indoor Unit Dimensions.

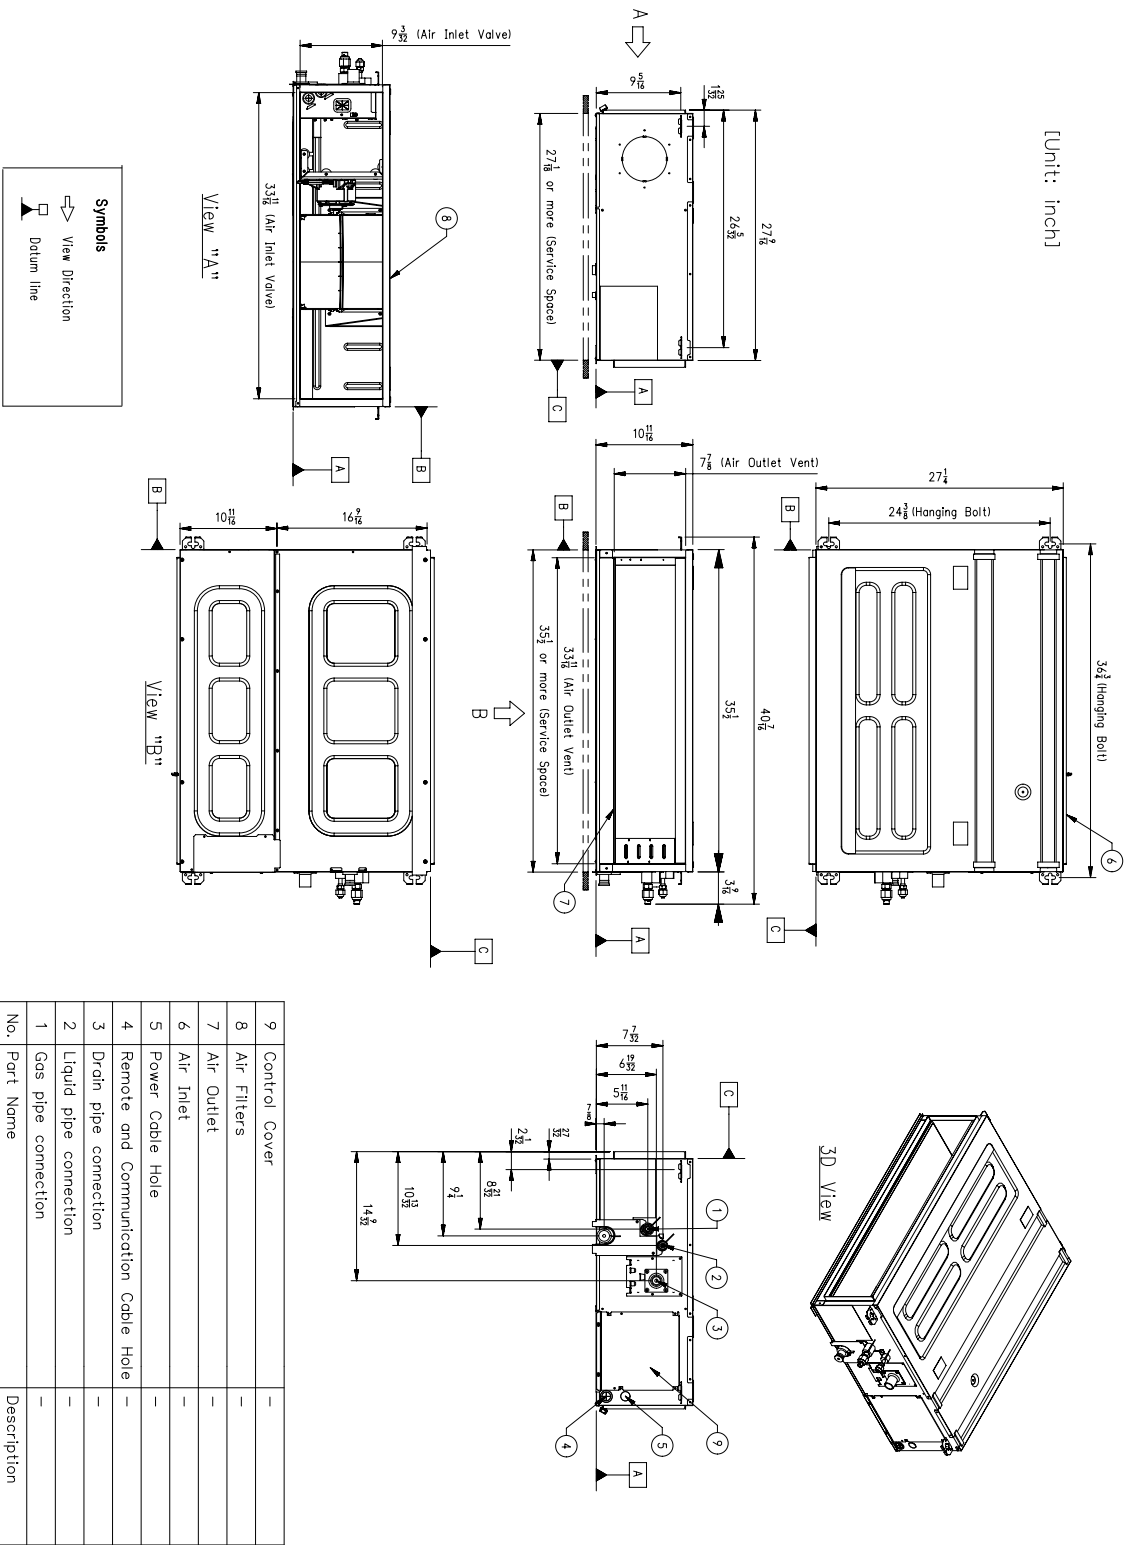

INDOOR UNIT DIMENSIONS

Dimensions for LHN368HV

Figure 7: LHN368HV Indoor Unit Dimensions.

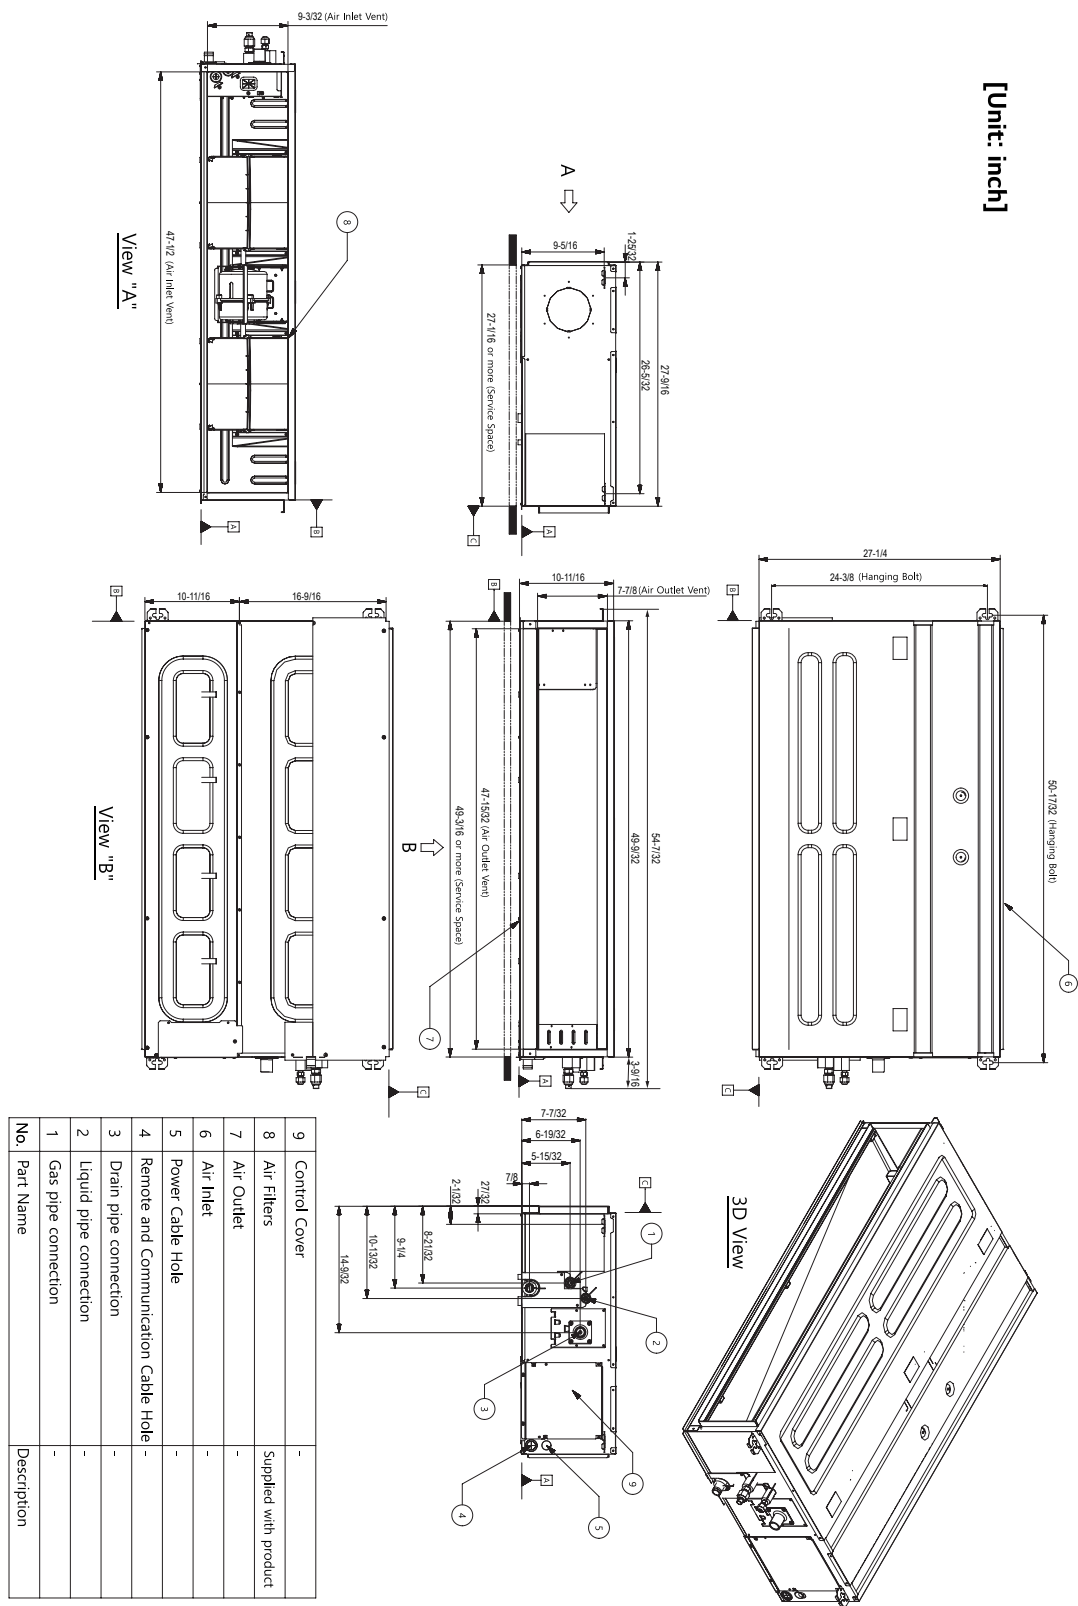


ACOUSTIC DATA

Sound Pressure for Outdoor Units

Outdoor Unit Sound Pressure Level Measurement

Figure 8: Ceiling-Concealed Ducted Outdoor Unit Sound Pressure Level Measurement Location.

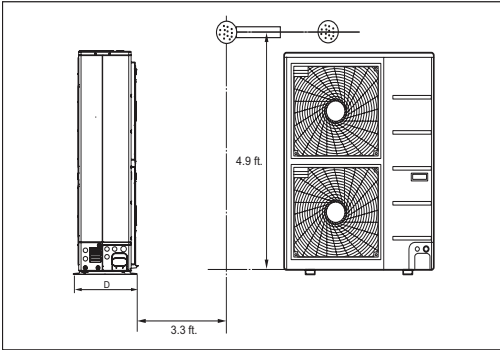



- Measurements taken with no attenuation and units operating at full load normal operating condition.
- Sound level will vary depending on a range of factors such as construction (acoustic absorption coefficient) of particular area in which the equipment is installed.
- Sound power levels are measured in dB(A)±1.
- Tested in anechoic chamber per ISO Standard 3745.

Outdoor Unit Sound Pressure Levels

Table 6: Ceiling-Concealed Ducted Outdoor Unit Sound Pressure Levels (dB[A]).

Model	Sound Pressure Levels (dB[A])	
	Cooling	Heating
<i>High Static</i>		
LUU240HV	48	52
LUU360HV	52	54

Outdoor Unit Sound Pressure Diagrams

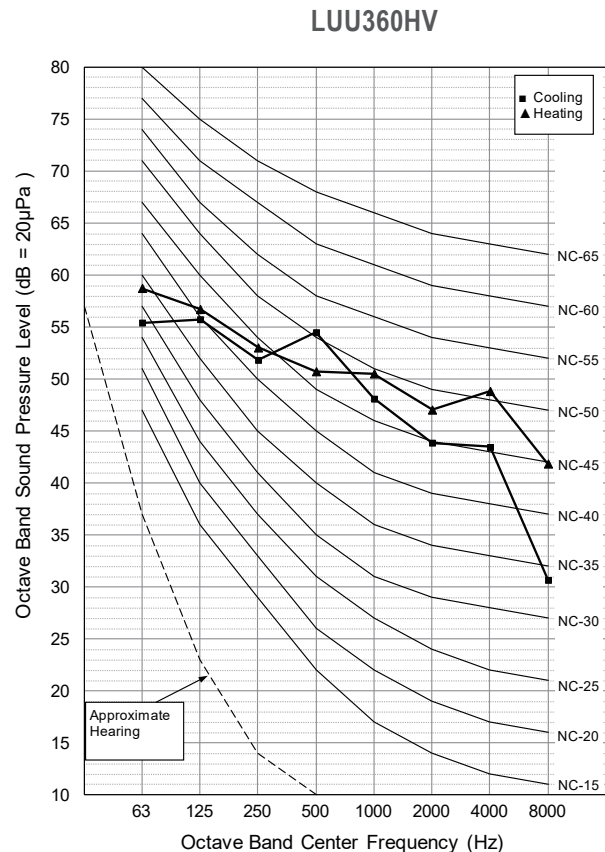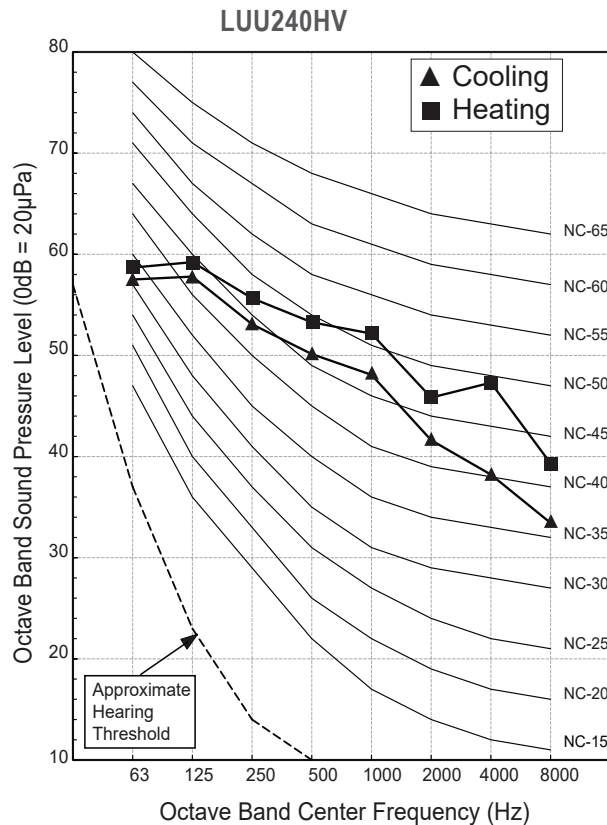

ACOUSTIC DATA


Sound Power for Outdoor Units

Outdoor Unit Sound Power Levels


Table 7: Outdoor Unit Sound Power Levels.

Outdoor Unit Model	Sound Power Levels dB(A)
	Max
LUU240HV	67
LUU360HV	65

Sound Power Diagram for LUU240HV

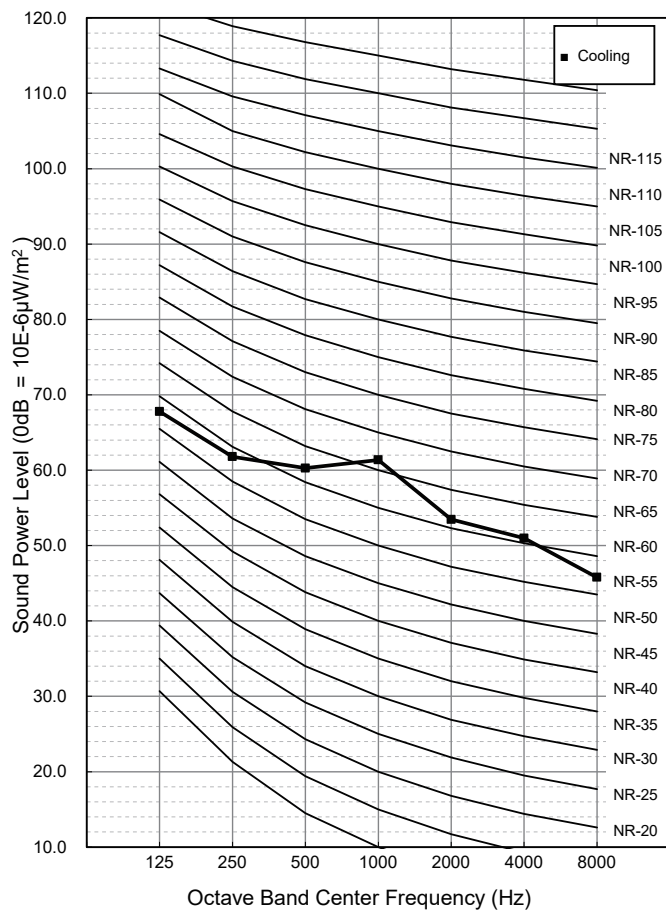

Sound Power Diagram for LUU360HV

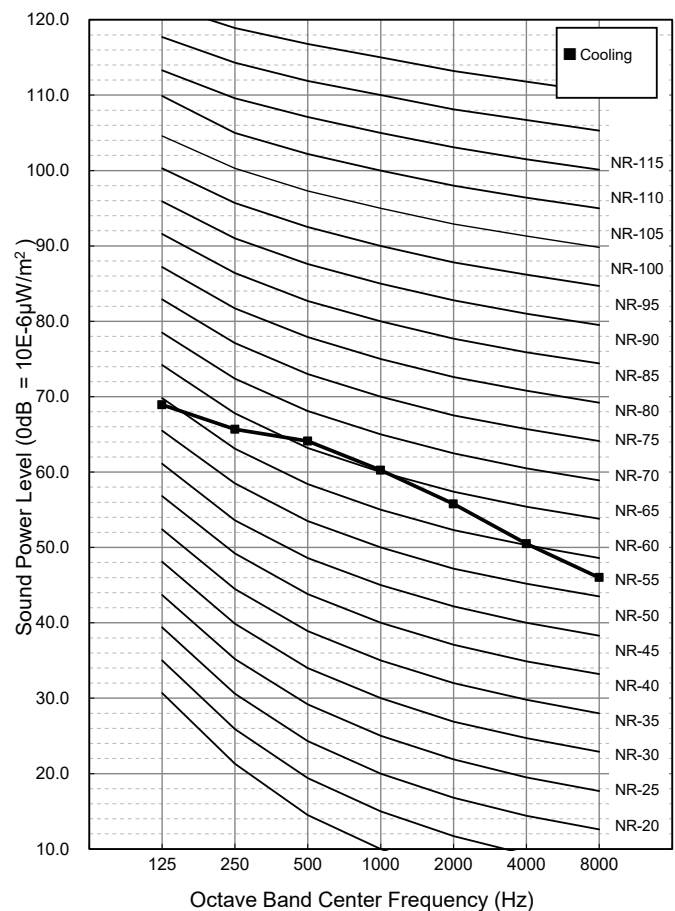


ACOUSTIC DATA

Sound Pressure for Indoor Units

Indoor Unit Sound Pressure Measurement

Figure 9: Indoor Unit Sound Pressure Level Measurement Location.

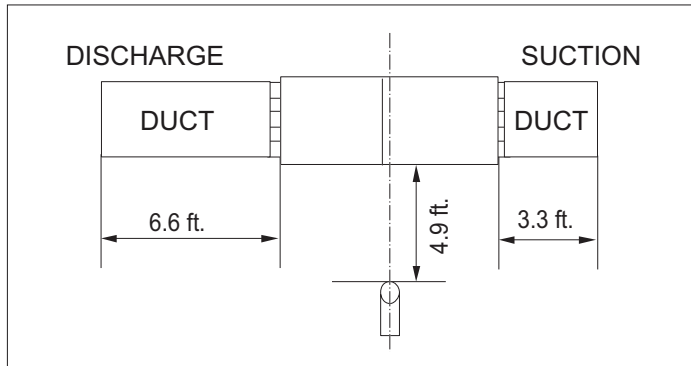

- Measurements taken with no attenuation and units operating at full load normal operating condition.
- Sound level will vary depending on a range of factors such as construction (acoustic absorption coefficient) of particular area in which the equipment is installed.
- Sound power levels are measured in dB(A)±1.
- Tested in anechoic chamber per ISO Standard 3745.


Table 8: Ducted Indoor Unit Sound Pressure Levels (dB[A]).

Model	Sound Pressure Levels (dB[A])		
	H	M	L
<i>High Static</i>			
LHN248HV	37	35	34
LHN368HV	44	42	40


Indoor Unit Sound Pressure Diagrams

Figure 10: Ducted Indoor Unit Sound Pressure Level Diagrams.

LHN248HV

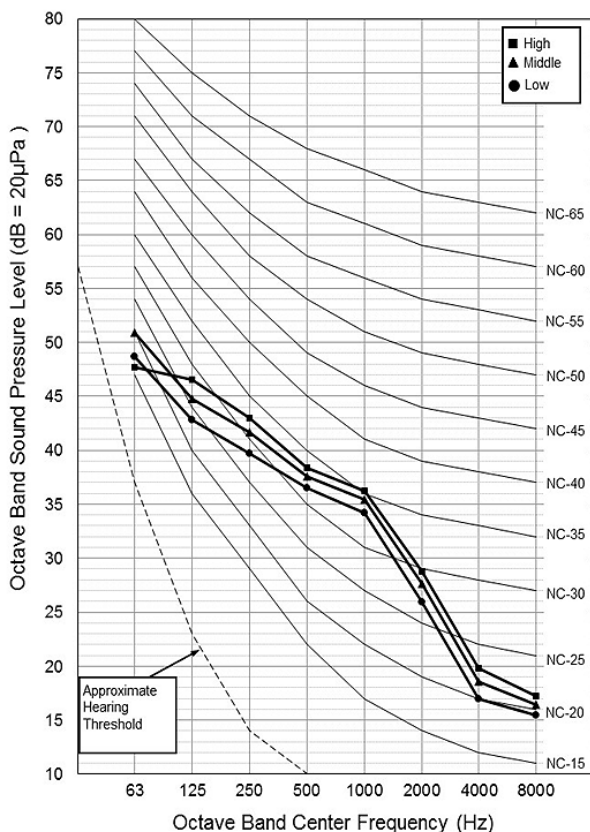

LHN368HV

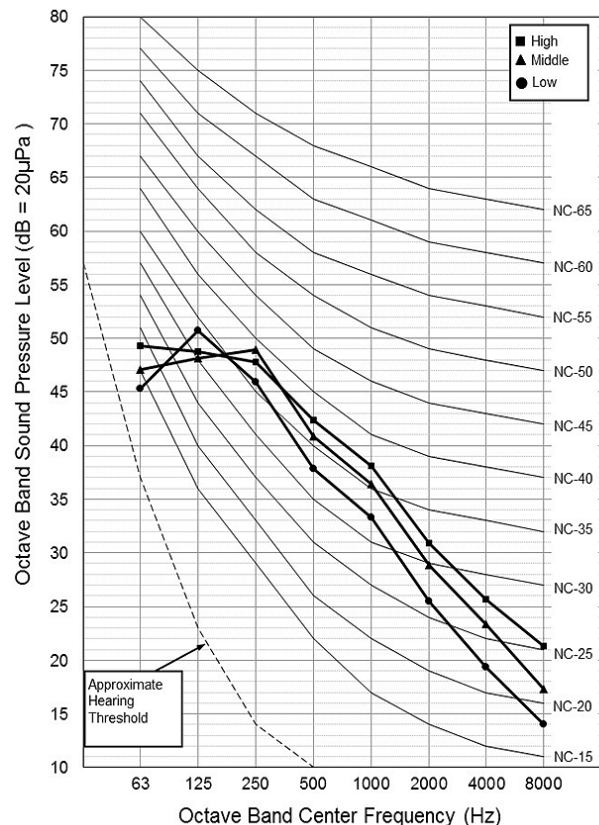

OUTDOOR UNIT REFRIGERANT FLOW DIAGRAM

Refrigerant Flow Diagram for LUU240HV, LUU360HV

Figure 11: LUU240HV, LUU360HV Refrigerant Flow Diagrams.

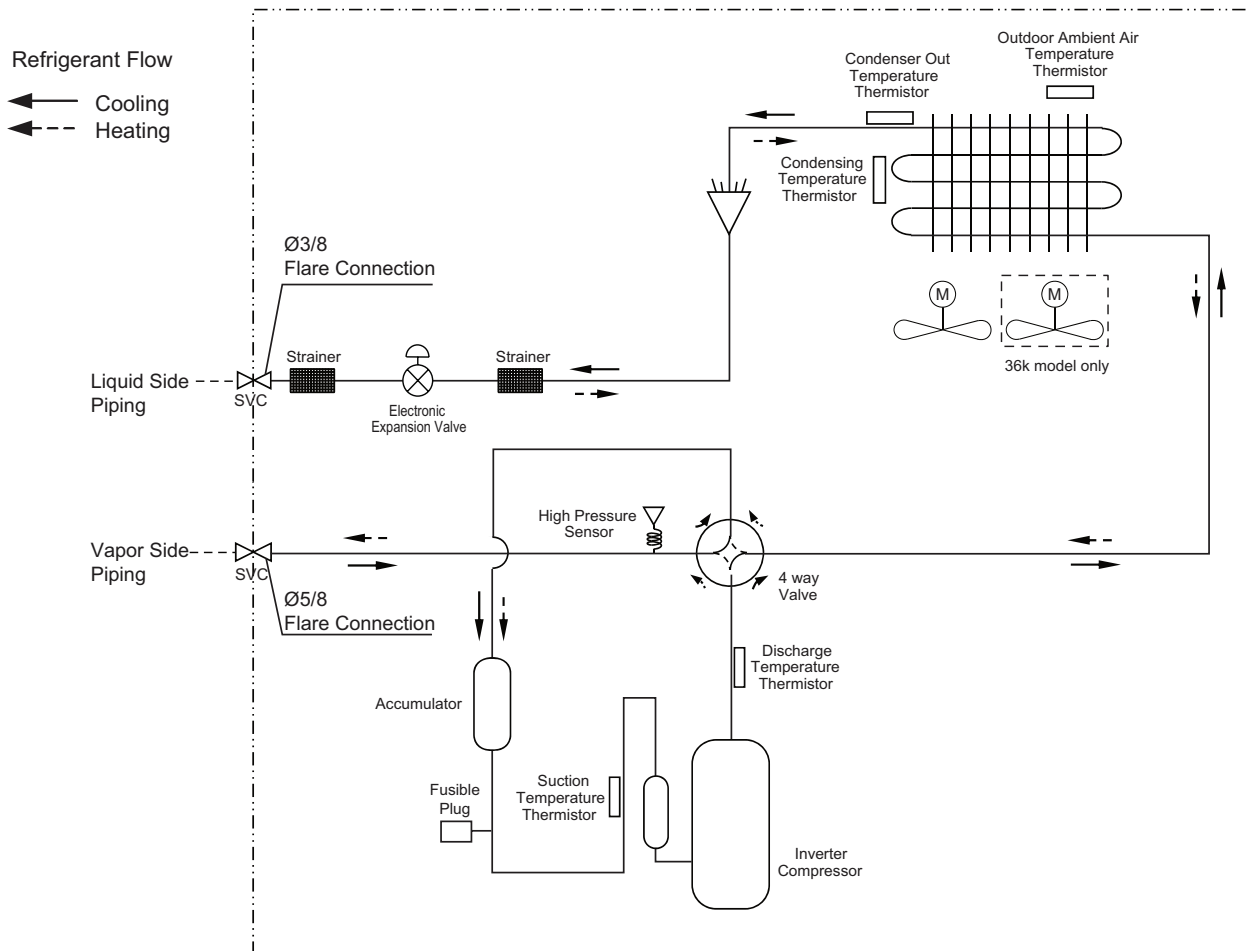


Table 9: LUU240HV, LUU360HV Ceiling-Concealed Ducted (Low Static) Outdoor Unit Thermistor Details.

Description	PCB Connector
Discharge Pipe Temperature Thermistor	CN_DISCHARGE_BK
Suction Pipe Temperature Thermistor	CN_SUCTION_GR
Condenser Outlet Pipe Temperature Thermistor	CN_C_PIPE_VI
Air Temperature Thermistor	CN_AIR_YL
Condenser Middle Pipe Temperature Thermistor	CN_MD_BR

INDOOR UNIT REFRIGERANT FLOW DIAGRAM

Refrigerant Flow Diagram for LHN248HV

Figure 12: LHN248HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Flow Diagram.

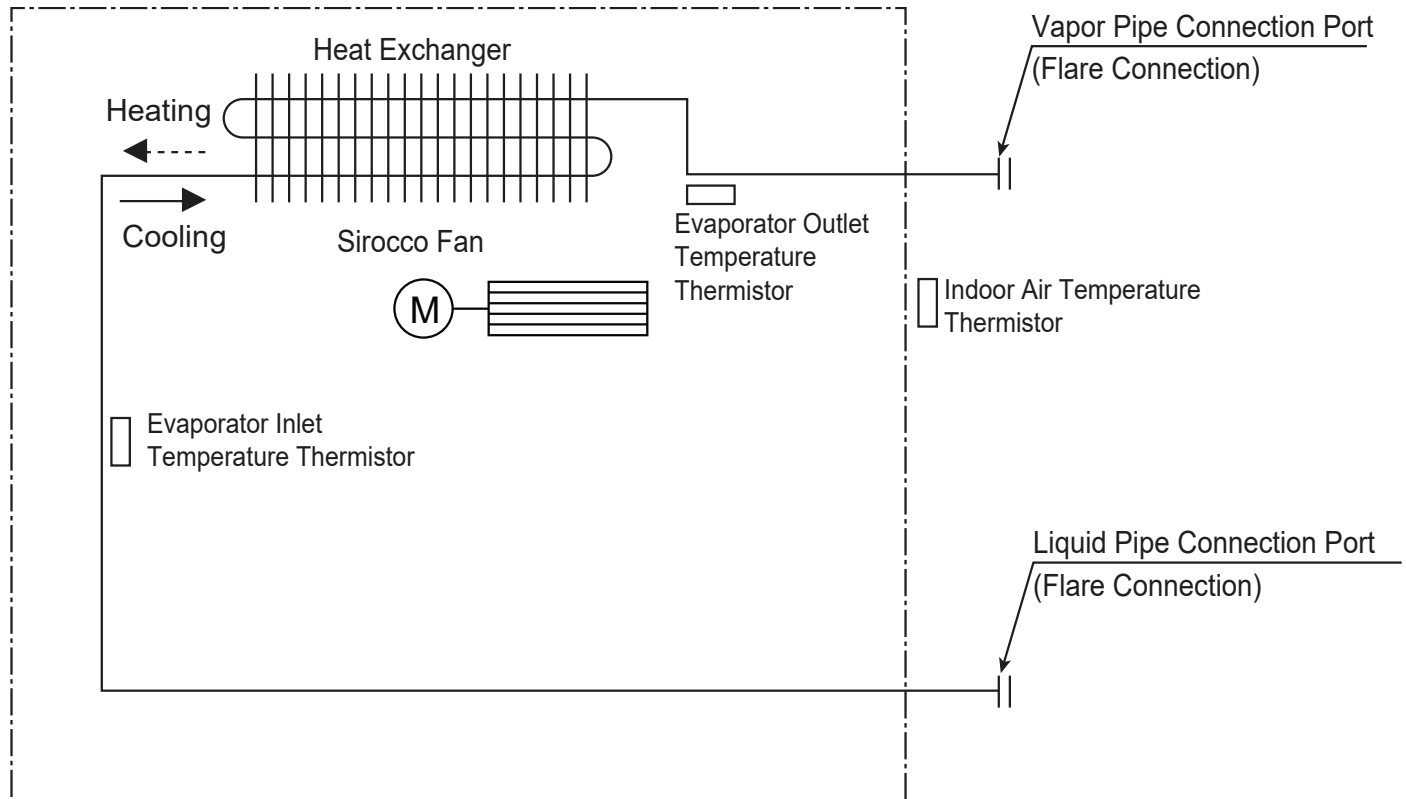


Table 10: LHN248HV Ceiling-Concealed Ducted (High Static) Indoor Unit Thermistor Details.

Description (Based on Cooling Mode)	PCB Connector
Indoor Air Temperature Thermistor	CN-ROOM
Evaporator Inlet Temperature Thermistor	CN-PIPE / IN
Evaporator Outlet Temperature Thermistor	CN-PIPE / OUT

Table 11: LHN248HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Pipe Connection Port Diameters.

Model No.	Vapor (inch)	Liquid (inch)
LHN248HV	5/8	3/8

Table 12: LHN248HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Pipe Sizes.

Model No.	Vapor (inch)	Liquid (inch)
LHN248HV	5/8	3/8

INDOOR UNIT REFRIGERANT FLOW DIAGRAM

Refrigerant Flow Diagram for LHN368HV

Figure 13: LHN368HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Flow Diagram.

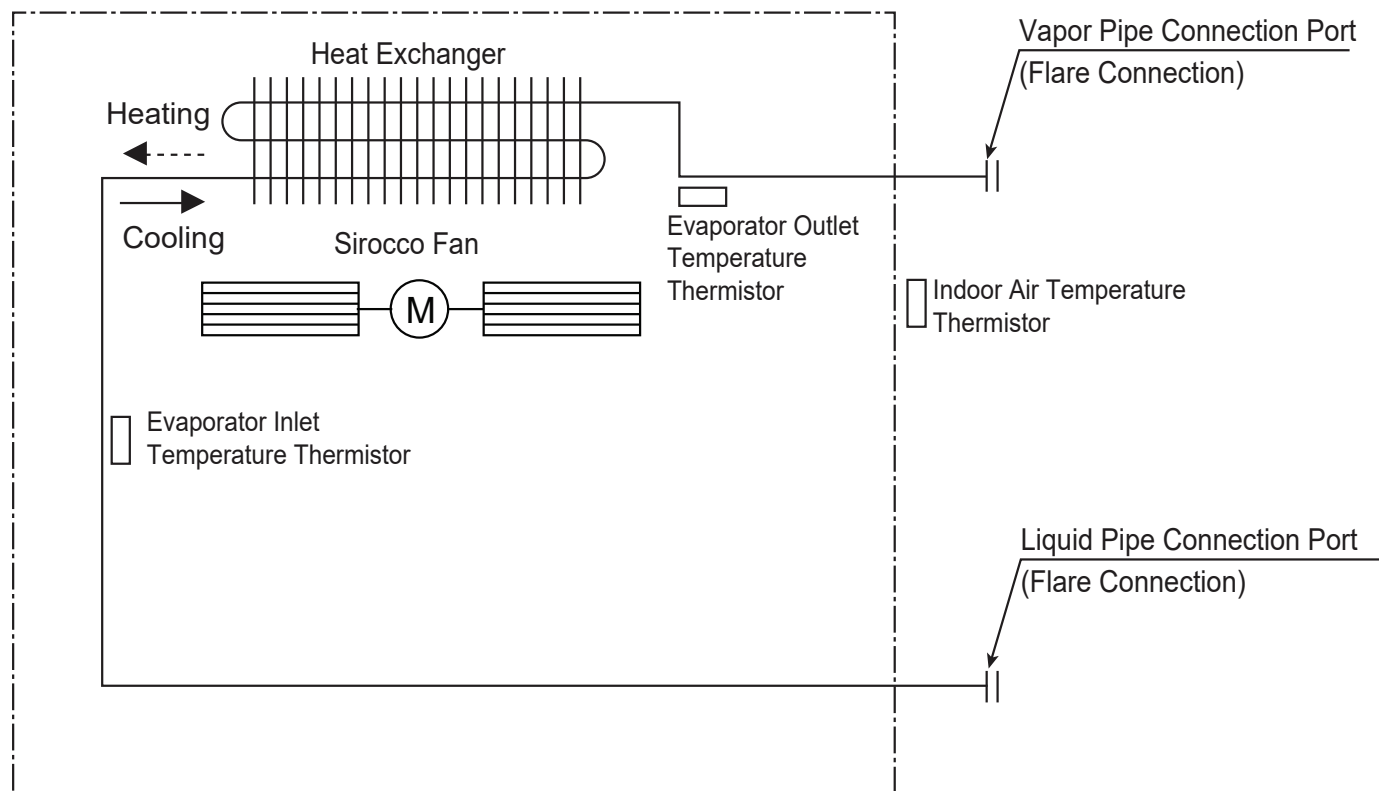


Table 13: LHN368HV Ceiling-Concealed Ducted (High Static) Indoor Unit Thermistor Details.

Description (Based on Cooling Mode)	PCB Connector
Indoor Air Temperature Thermistor	CN-ROOM
Evaporator Inlet Temperature Thermistor	CN-PIPE / IN
Evaporator Outlet Temperature Thermistor	CN-PIPE / OUT

Table 14: LHN368HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Pipe Connection Port Diameters.

Model No.	Vapor (inch)	Liquid (inch)
LHN368HV	5/8	3/8


Table 15: LHN368HV Ceiling-Concealed Ducted (High Static) Indoor Unit Refrigerant Pipe Sizes.

Model No.	Vapor (inch)	Liquid (inch)
LHN368HV	5/8	3/8

OUTDOOR UNIT WIRING DIAGRAM

Wiring Diagram for LUU240HV


Figure 14: LUU240HV Outdoor Unit Wiring Diagram.

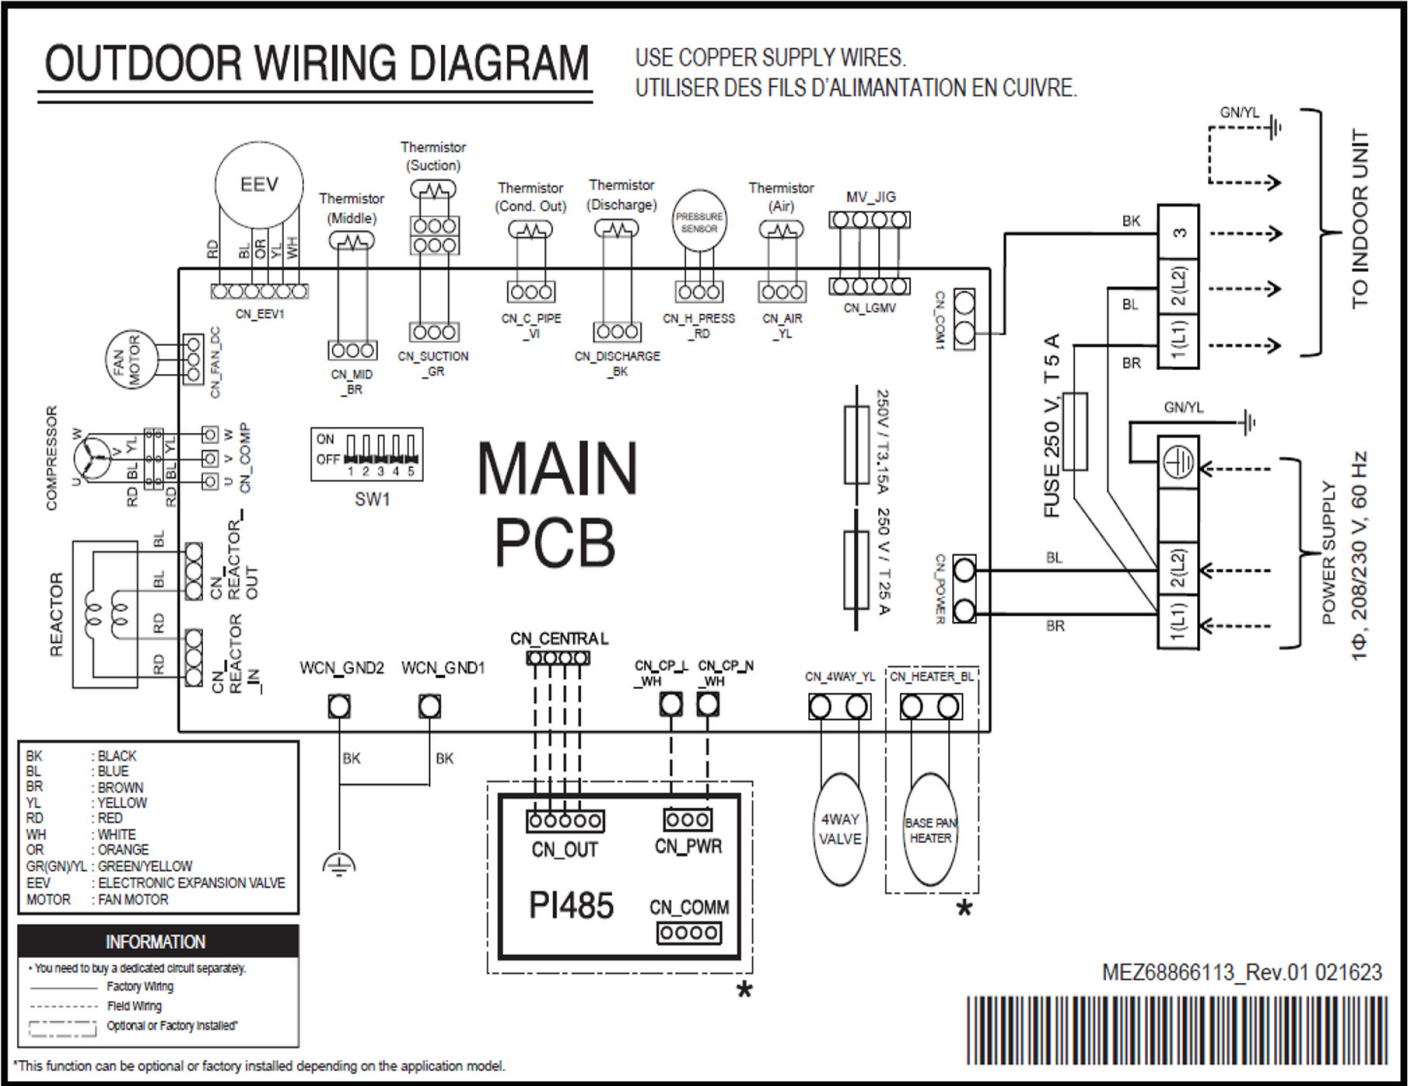

OUTDOOR UNIT WIRING DIAGRAM

Wiring Diagram for LUU360HV

Figure 15: LUU360HV Outdoor Unit Wiring Diagram.

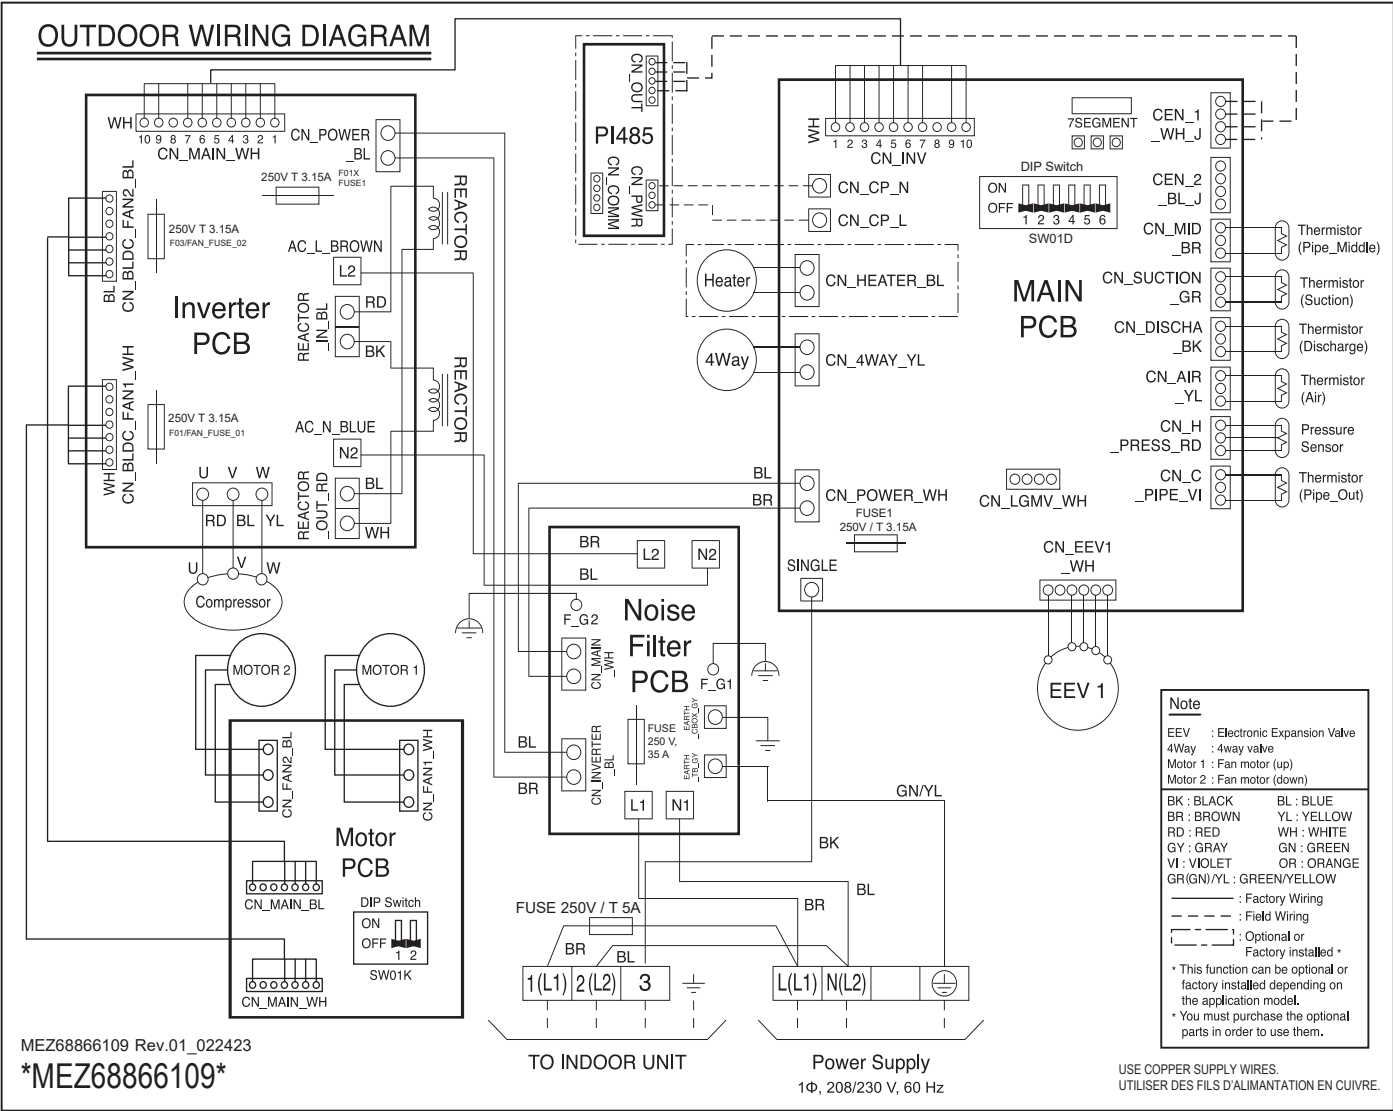


MEZ68866109 Rev.01_022423
MEZ68866109

INDOOR UNIT WIRING DIAGRAM

Wiring Diagram for LHN248HV, LHN368HV

Figure 16: LHN248HV, LHN368HV Ceiling-Concealed Ducted (High Static) Indoor Unit Wiring Diagram.

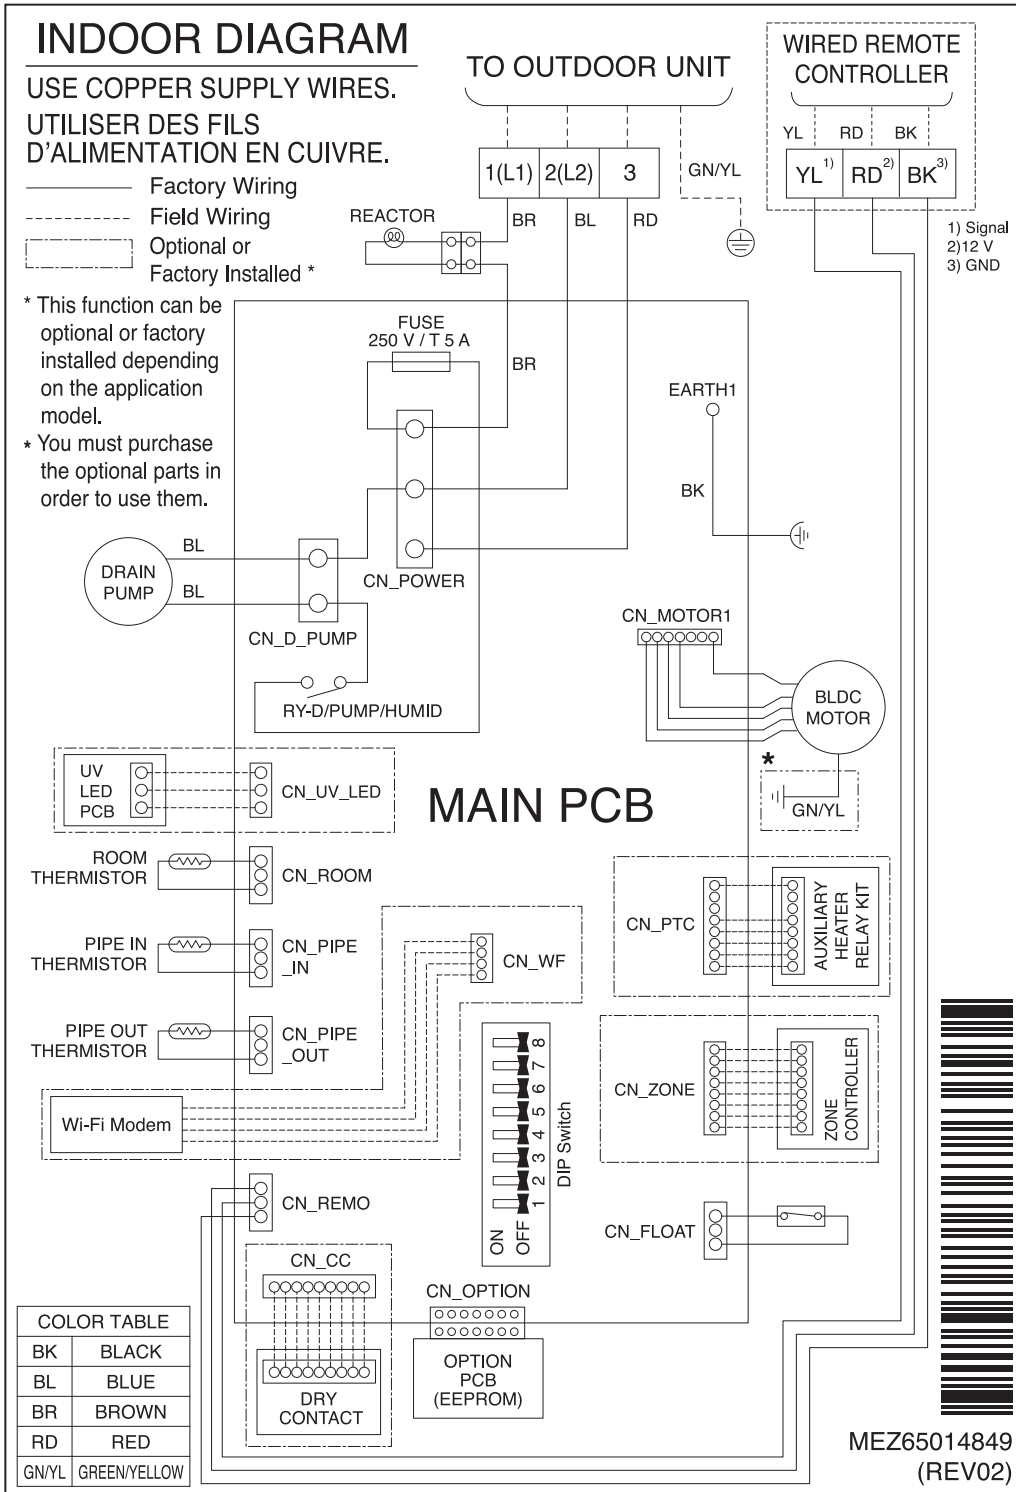

ELECTRICAL CONNECTIONS

General Power Wiring / Communications Cable Guidelines

- Follow manufacturer's circuit diagrams displayed on the inside of the control box cover.
- Have a separate power supply for the indoor units.
- Provide a circuit breaker switch between the power source and the indoor unit.
- Confirm power source specifications.
- Properly ground the outdoor unit and the indoor unit per NEC and local codes.
- Connect the wiring firmly so that the wires cannot be easily pulled out.
- Confirm that the electrical capacity is sufficient.
- Power supply to the outdoor unit must be selected based on NEC and local codes. Maximum allowable voltage fluctuation $\pm 10\%$ or name-plate rated value.
- It is recommended that a circuit breaker is installed, especially if conditions could become wet or moist.
- Include a disconnect in the power wiring system. Add an air gap contact separation of at least 1/8 inch in each active (phase) conductor.
- Any openings where the field wiring enters the cabinet must be completely sealed.

⊘ Do not install power wiring to the outdoor unit and the communication / connection (power) cable to the indoor unit in the same conduit. Use separate conduits.

Communication / Connection (Power) Cable Specifications from Outdoor Unit to Indoor Unit

- Power wiring to the outdoor unit must be solid or stranded, and must comply with the applicable local and national electric codes.
- For communication / connection (power) wires between the Single Zone outdoor unit and the indoor unit, use a minimum 14 gauge, four (4) conductor, stranded, shielded or unshielded wire. If shielded, the wire must be grounded to the chassis at the outdoor unit only. Wiring must comply with all applicable local and national codes.
- Communication cable from indoor unit to remote controller(s) is to be 22 AWG, 3-conductor, twisted, stranded, unshielded. Wiring must comply with all applicable local and national codes.
- Insulation material as required by local code.
- Firmly attach the cable; provide slack but secure in a way to prevent external forces from being imparted on the terminal block.
- Wiring must be completed without splices.

WARNING

- Terminal screws may become loose during transport. Properly tighten the terminal connections during installation or risk electric shock, physical injury, or death.
- Loose wiring may cause unit to malfunction, overheat, and catch fire, resulting in severe injury or death.

Note:

- Terminal screws may loosen during transport. Properly tighten the terminal connections during installation or risk equipment malfunction or property damage.
- Loose wiring may cause unit malfunction, the wires to burnout or the terminal to overheat and catch fire. There is a risk of equipment malfunction or property damage.

A voltage drop may cause the following problems:


- Magnetic switch vibration, fuse breaks, or disturbance to the normal function of an overload protection device.
- Compressor will not receive the proper starting current.

ELECTRICAL CONNECTIONS

Note:

- Always verify the communication cable is connected to a communications terminal on the Single Zone unit. ⚠ Never apply line voltage power to the communication cable connection. If contact is made, the PCBs will be damaged.
- The shield of the communications cable connecting the outdoor unit to the indoor unit must be grounded only to the outdoor unit frame.
- Tie the shield of each cable segment together using a wire nut at the indoor unit. Maintain polarity throughout the communication network.
- Position the incoming power to the outdoor unit away from the power / communications cables from the outdoor unit to the indoor unit.
- ⚠ Never use a common multiple-core communications cable.

Figure 17: Typical Single Zone Outdoor Unit to Indoor Unit Wiring and Communications Cable Diagram.

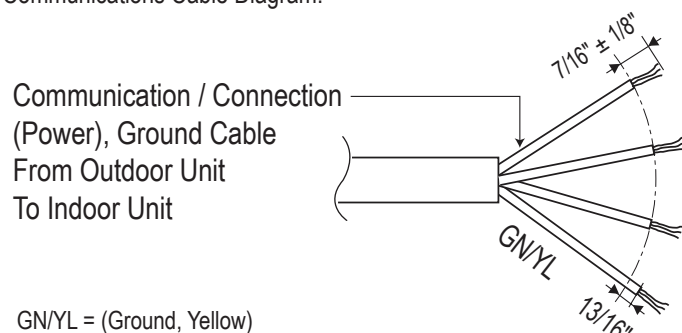

⚠ WARNING

All power wiring and communication cable installation must be performed by trained service providers working in accordance with local, state, and National Electrical Code (NEC) / UL / ETL federal regulations related to electrical equipment and wiring, and following the manufacturer product diagrams, requirements, and instructions in this manual. Failure to do so will lead to electric shock which can cause physical injury or death.

Note:

- Use of 14 gauge, four (4) conductor, stranded, shielded or unshielded wire is allowed for lengths up to the published maximum pipe length, plus recommended slack at both ends.

ELECTRICAL CONNECTIONS

Outdoor Unit Power Wiring / Communications Cable Connections

LUU240HV, LUU360HV Outdoor Unit Connections

1. Remove the cover or control cover from the unit by loosening the fastening screws.
2. Take off the caps on the conduit panel.
3. Connect both the power supply and low voltage lines to the corresponding terminals on the terminal block.
4. Be sure to ground the unit by following local codes.
5. Allow for enough length (add several inches) for each wiring.
6. Secure the cable with the cord clamp.
7. Secure conduit tubes with lock nuts.
8. Reattach the control cover to the original position with the fastening screws.

Figure 18: LUU240HV ODU Terminal Block Location.


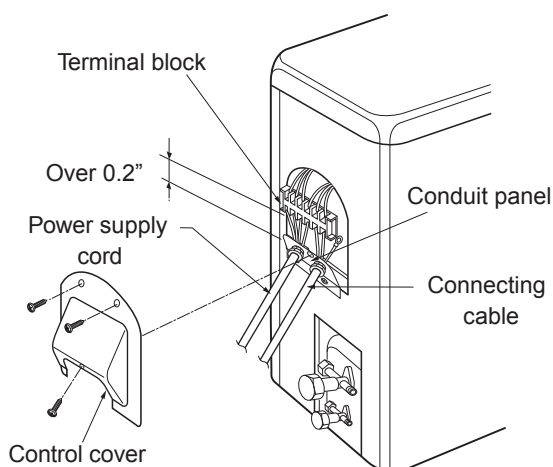


Figure 19: LUU360HV ODU Terminal Block Location.

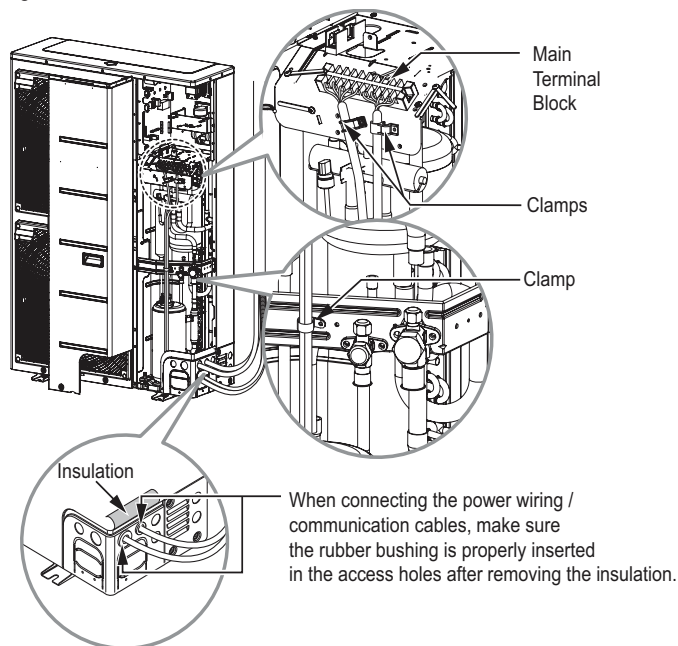


ELECTRICAL CONNECTIONS

Ducted Indoor Unit Power Wiring / Communications Cable Connections

1. To access the terminal block, first detach the cover from the control box.
2. Insert the power wiring / communications cable from the outdoor unit through the sides of the indoor unit and control box. Pass the wiring through the designated access holes to prevent damage. To prevent electromagnetic interference and product malfunction, leave a space between the power wiring and communications cable outside of the indoor unit. (For power wiring / communications cable between the single zone outdoor unit and the indoor unit, use a four-conductor, stranded, shielded or unshielded wire. If shielded, the wire must be grounded to the chassis at the outdoor unit only.)
3. Connect each wire to its appropriate terminal on the indoor unit control board. Verify that the color and terminal numbers from the outdoor unit wiring match the color and terminal numbers on the indoor unit.
4. Secure the power wiring / communications cable with the cable restraint.
5. Reattach the steel clamp to the inside of the control panel.
 - Place the wiring / cables in the clamp and tighten the plastic clamp to an open surface of the control panel.
 - Do not apply force to the wiring connections when clamping.
 - Neatly arrange the wiring. Do not catch the wiring in the electric box cover. Ensure the cover firmly closes.
6. Fill in any gaps around the wiring access holes with sealant to prevent foreign particles from entering the indoor unit.


Figure 21: Accessing the Indoor Unit Terminal Block.

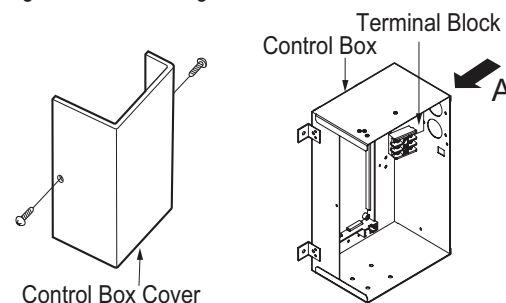

Using a Conduit

Figure 22: Ducted Indoor Unit Terminal Block Location / Using a Conduit.

1. Remove the rubber stopper on the indoor unit. Pass the power wiring / communications cable through the conduit, the conduit mounting plate, and to / through the control panel of the indoor unit.
2. Connect the power wiring / communications cable to the indoor unit terminal block.
3. Screw the conduit mounting plate to the indoor unit.
4. Tighten the conduit and the conduit mounting plate together.

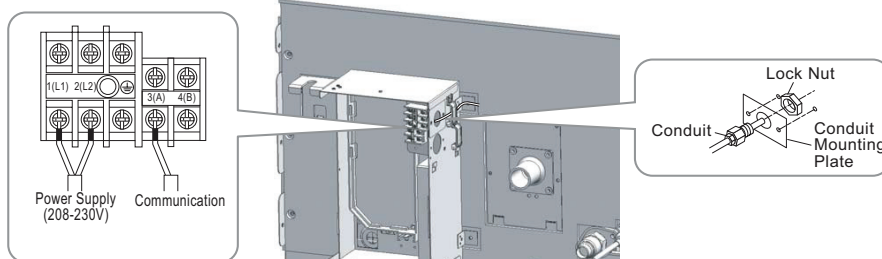

Note:

Always use a circuit breaker or time delay fuse when connecting electrical wiring to the unit.


⚠ WARNING

- Separately wire the high and low voltage lines. There is a risk of electric shock, physical injury, or death.
- Use heat-proof electrical wire capable of withstanding temperatures up to 167°F to avoid wiring malfunction and electrical shock, which may cause physical injury or death.
- Ensure you connect the wire firmly. Loose wiring may cause unit malfunction, the wires to burnout or the terminal to overheat and catch fire. There is a risk of electric shock, physical injury or death.
- Use outdoor and waterproof connection cable rated up to 300V for the connection between the indoor and outdoor unit to avoid electrical shock, which may cause physical injury or death.

Note:

- Separately wire the high and low voltage lines to avoid damage to unit.
- Use heat-proof electrical wire capable of withstanding temperatures up to 167°F to avoid damage to unit.
- Always use a circuit breaker or time delay fuse when connecting electrical wiring to the unit.
- Connect the wire firmly. Loose wiring may cause unit malfunction, the wires to burnout or the terminal to overheat and catch fire. There is a risk of equipment malfunction or property damage.
- Use outdoor and waterproof connection cable rated up to 300V for the connection between the indoor and outdoor unit to avoid damage to the unit.
- Comply with local codes while running wire from the indoor unit to the outdoor unit.
- Do not allow wire to touch refrigerant tubing, the compressor or any moving parts since it can lead to mechanical failure.


Figure 20: Circuit Breaker/Time Delay Fuse Connection.

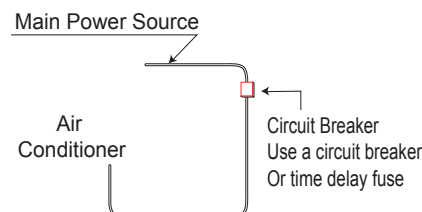

ELECTRICAL CONNECTIONS

Wiring Connections

Figure 23: Detailed Power / Communications System Schematic.

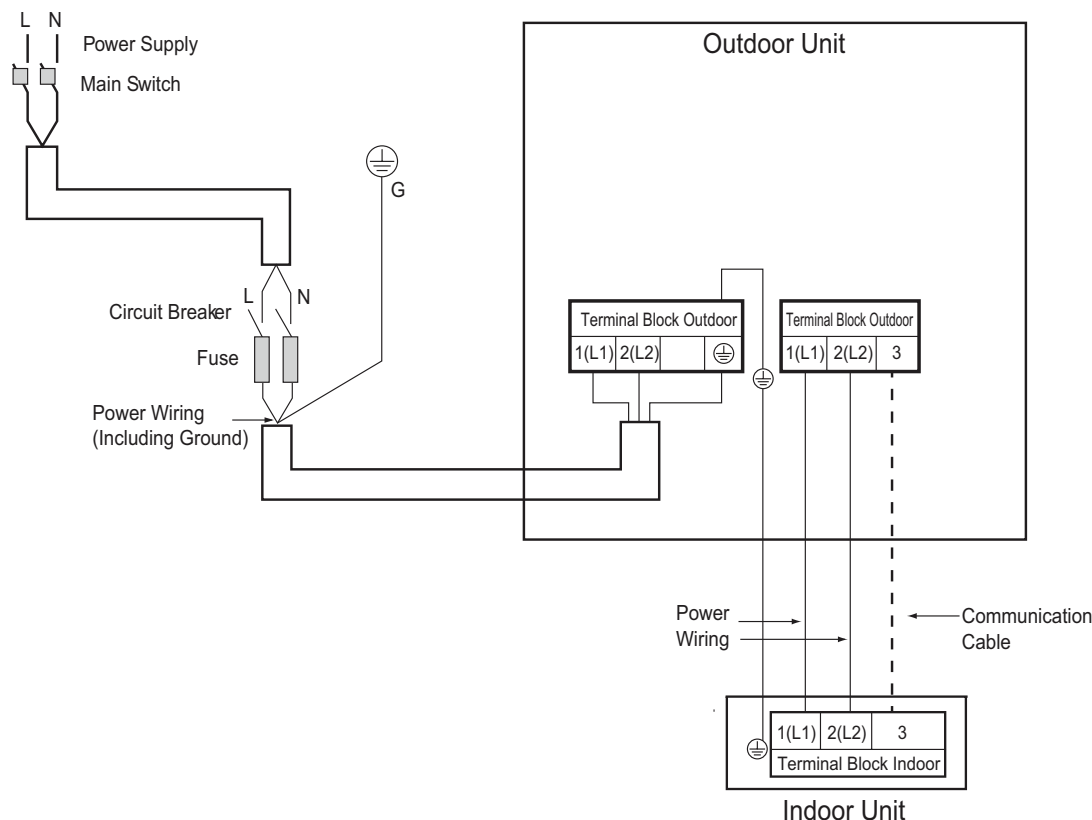

Note:

- Power wiring and communications cable sizes must comply with applicable federal UL / ETL, state, and local codes.
- Separately wire the high and low voltage lines to avoid damage to the unit.
- Local codes may require field-installed disconnect switches from outdoor unit to indoor unit.
- Use heat-proof electrical wire capable of withstanding temperatures up to 167°F to avoid damage to unit.
- Always use a circuit breaker or time delay fuse when connecting electrical wiring to the unit.
- Firmly connect the wire. Loose wiring may cause unit malfunction, the wires to burnout or the terminal to overheat and catch fire. There is a risk of equipment malfunction or property damage.
- Use outdoor and waterproof connection cable rated up to 300V for the connection between the indoor and outdoor unit to avoid damage to the unit.
- Comply with local codes while running wire from the indoor unit to the outdoor unit.
- ⚠ Do not allow wire to touch refrigerant tubing, the compressor or any moving parts since it can lead to mechanical failure.

ELECTRICAL CONNECTIONS

Wired Controller Connections

Optional controllers can connect to the Single Zone Ducted indoor unit in one of two different ways.

1. LG Wired Remote Extension Cable with Molex plug (PZCWRC1; sold separately) that connects to the CN-REMO terminal on the indoor unit PCB.
2. Field-supplied controller cable that connects to the indoor unit terminal block (must be at least UL2547 or UL1007, and at least FT-6 rated if local electric and building codes require plenum cable usage). Communication cable from indoor unit to remote controller(s) is to be 22 AWG, 3-conductor, twisted, stranded, unshielded. Wiring must comply with all applicable local and national codes.

Figure 24: PZCWRC1 LG Wired Remote Extension Cable


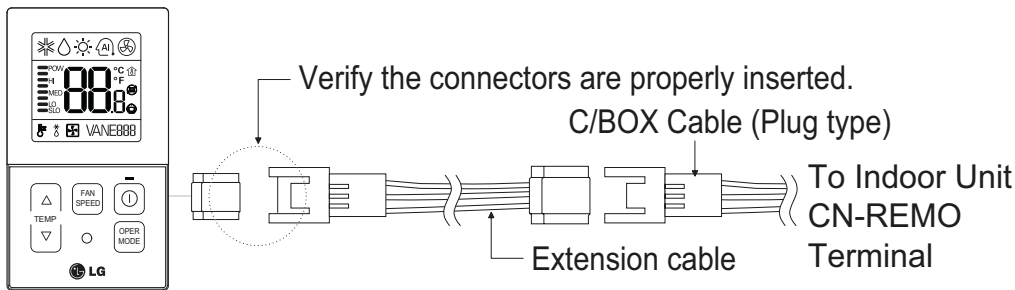


Figure 25: Wired Controller Connection on the Indoor Unit Terminal Block.

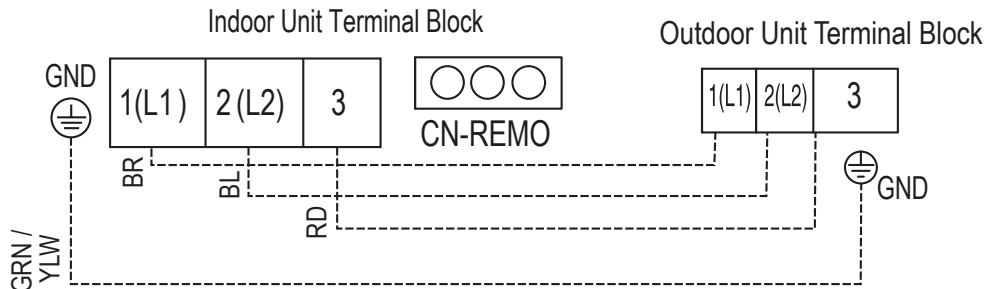

Note:

When using field-supplied controller cable, make sure to connect the yellow to yellow (communications wire), red to red (12V power wire), and black to black (ground wire) terminals from the remote controller to the indoor unit terminal blocks.

ELECTRICAL CONNECTIONS


Wired Controller Placement

Wired controllers include a sensor to detect room temperature. To maintain comfort levels in the conditioned space, the wired controller must be installed in a location away from direct sunlight, high humidity, and where it could be directly exposed to cold air. Controller must be installed four (4) to five (5) feet above the floor where its LED display can be read easily, in an area with good air circulation, and where it can detect an average room temperature.

⊘ Do not install the wired controller near or in:

- Drafts or dead spots behind doors and in corners.
- Hot or cold air from ducts.
- Radiant heat from the sun or appliances.
- Concealed pipes and chimneys.
- An area where temperatures are uncontrolled, such as an outside wall.

Figure 26: Proper Location for the Wired Controller.

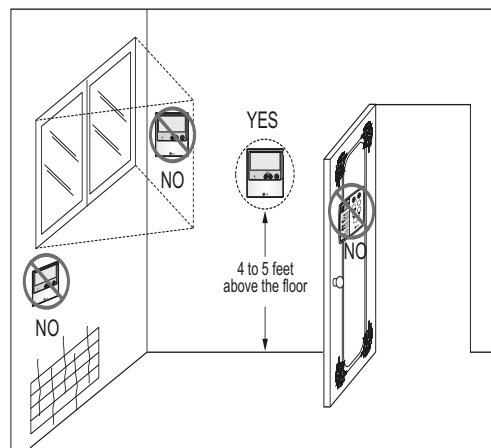

Assigning the Thermistor for Temperature Detection

Each indoor unit includes a return air thermistor assigned to sense the temperature. If a wired controller is installed, there is a choice of sensing temperature with either the indoor unit return air thermistor or the thermistor in the wired controller. It is also an option to set both thermistors to sense temperature so that indoor unit bases its operation on the first thermistor to reach the designated temperature differential.

EXTERNAL STATIC PRESSURE

Indoor Units

Ceiling-Concealed High Static Ducted External Static Pressure Settings

Table 16: Ceiling-Concealed Ducted (High Static) LHN248HV Indoor Unit External Static Pressure Setting Values Table.

Static Pressure (in. wg)			0.1	0.16	0.2	0.24	0.28	0.31	0.35	0.39	0.43	0.47	0.51	0.59
Model No. / Nominal Capacity of System (Btu/h)	Airflow Rate / CFM		Setting Value (in. wg)											
LHN248HV 24,000	High	777	110	117	121	124	127	130	133	136	137	-	138	140
	Mid	706	102	110	114	118	120	125	127	130	133	-	134	136
	Low	636	96	102	107	110	114	118	122	125	127	-	130	132

Table 17: Ceiling-Concealed Ducted (High Static) LHN368HV Indoor Unit External Static Pressure Setting Values Table.

Static Pressure (in. wg)			0.1	0.16	0.2	0.24	0.28	0.31	0.35	0.39	0.43	0.47	0.51	0.59
Model No. / Nominal Capacity of System (Btu/h)	Airflow Rate / CFM		Setting Value (in. wg)											
LHN368HV 36,000	High	1,130	-	109	112	115	119	122	126	128	131	134	137	144
	Mid	989	-	101	105	108	112	115	119	123	127	130	133	138
	Low	848	-	92	97	101	105	109	113	117	121	124	127	134

Note:

- To get the desired air flow and external static pressure combination, use the setting value from the table. Using a setting value other than that listed in the table will not provide the desired combination.
- Table data is based at 230V. Air flow rate varies according to voltage fluctuation.

EXTERNAL STATIC PRESSURE


Indoor Units







Setting the External Static Pressure on the Remote Controller

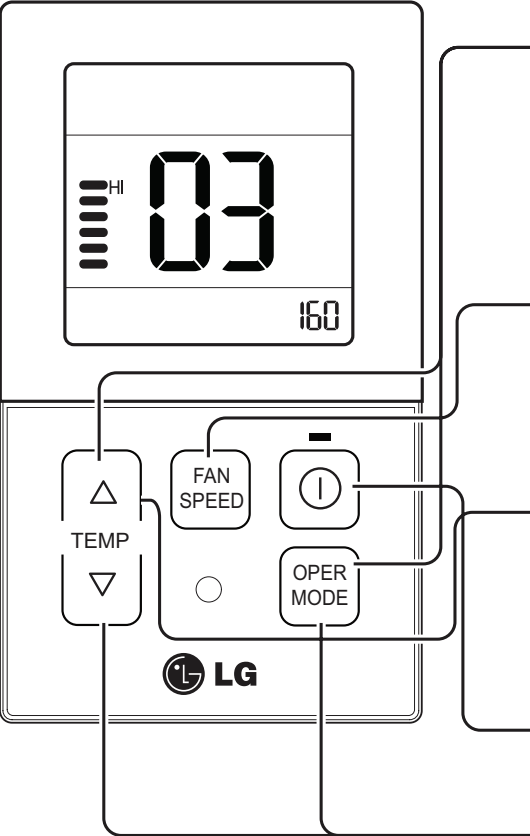Use this function to set the wind strength for each airflow level.

Note:

- The external static pressure must be set by a trained service provider, and it must be set correctly. If the external static pressure is set incorrectly, the product may malfunction.
- Do not alter the external static pressure value that corresponds to each airflow level.
- External static pressure values vary according to the model.
- When the airflow rate is increased to a higher value, during the external static value setup, the previous airflow value will be stored in the system memory. (External static pressure values are saved to system memory before the changes are implemented).



- 1 To access the controller set mode, press the  and  buttons simultaneously for >three (3) seconds.
* External Static Pressure Code: 03
- 2 Select the desired air flow rate with the  button.
(Choose from SLo→Lo→Med→Hi→Po.)
- 3 Select the desired air flow rate value with the temperature up), down) button.
* External Static Pressure value range: 0~255
- External Static Pressure value will be displayed at the upper right-hand section of the screen.
- 4 Press the  button to save / set the chosen External Static Pressure value.
- 5 To deactivate the controller set mode, press the  and  buttons simultaneously for > three (3) seconds.
- If there is no input (no buttons pressed) for more than 25 seconds, the controller set mode will automatically deactivate.

Ceiling-Concealed Ducted Indoor Unit Accessories

Table 18: Ceiling-Concealed Ducted Indoor Unit Accessories.

Model No.	Description
ZLABGP04A	Low Ambient Wind Baffle for Low Static Ducted Indoor Units
ZFBXM101A	High Efficiency Filter Box for High Static Ducted Indoor Unit LHN248HV
ZFBXM201A	High Efficiency Filter Box for High Static Ducted Indoor Unit LHN368HV
ZFBXD201A	Dynamic V8 2VL Low Profile Air Cleaner for High Static Ducted Indoor Units
ZPLMV201A	Dynamic 2VL Air Cleaner Low Profile Return Air Plenum for High Static Ducted Indoor Units
ZFBXD402A	Dynamic V8 4VL Low Profile Air Cleaner for High Static Ducted Indoor Units
ZPLMV402A	Dynamic 4VL Air Cleaner Low Profile Return Air Plenum for High Static Ducted Indoor Units
ZFLT1301A	4-Pack Dynamic V8 VL Air Cleaner Replacement Filter Pads for High Static Ducted Indoor Units
ZFLT1302A	24-Pack Dynamic V8 VL Air Cleaner Replacement Filter Pads for High Static Ducted Indoor Units
ZGRLRA01A	Dynamic V8 Air Cleaner Louvered Return Air Grille (one per plenum) for High Static Ducted Indoor Units
ZGRLRA02A	Dynamic V8 Air Cleaner Egg Crate Return Air Grille (one per plenum) for High Static Ducted Indoor Units

Drain Pan Heater

Figure 27: Drain Pan Heater.



Table 19: Drain Pan Heater Capacities.

ODU	Heater kW	Accessory Model	Note
LUU240HV	120W	PQSH1200	Optional
LUU360HV	120W	PQSH1200	Optional

ACCESSORIES

LG Monitoring View (LGMV) Diagnostic Software and Cable

LGMV software allows the service technician or commissioning agent to connect a computer USB port to the outdoor unit main printed circuit board (PCB) using an accessory cable without the need for a separate interface device. The main screen for LGMV allows the user to view the following real time data on one screen:

- Actual inverter compressor speed
- Target inverter compressor speed
- Actual outdoor fan speed
- Target outdoor unit fan speed
- Actual superheat
- Target superheat
- Actual subcooler circuit superheat
- Target subcooler circuit superheat
- Main EEV position
- Subcooling EEV position
- Inverter compressor current transducer value
- Outdoor air temperature
- Actual high pressure/saturation temperature
- Actual low pressure/saturation temperature
- Suction temperature
- Inverter compressor discharge temperature
- Constant speed compressor discharge temperature
- Front outdoor coil pipe temperature
- Back outdoor coil pipe temperature
- Liquid line pipe temperature
- Subcooler inlet temperature
- Subcooler outlet temperature
- Average indoor unit (IDU) pipe temperature
- Inverter compressor operation indicator light
- Four-way reversing valve operation indicator light
- Pressure graph showing actual low pressure and actual high pressure levels
- Error code display
- Operating mode indicator
- Target high pressure
- Target low pressure
- PCB (printed circuit board) version
- Software version
- Installer name

Additional screens can be accessed by tabs on the main screen:

1. Cycleview: Graphic of internal components including:
 - Compressors showing actual speeds
 - EEVs
 - Indoor Units
 - Liquid injection valves
 - Temperature and pressure sensors
 - Four-way reversing valve
 - Outdoor fans showing status and speeds
2. Graph: Full screen graph of actual high and low pressures and high and low pressure limits. A sliding bar enables user to go back in time and view data.
3. Control IDU: Enables user to turn on all IDU's default setpoints of 86°F in heat mode or 64°F in cool mode.
4. Setting: Converts metric values to imperial values.
5. Making Data: Recording of real time data to a separate file created to be stored on the user's computer.
6. Loading Data: Recorded data from a saved ".CSV" file can be loaded to create an LGMV session.
7. Electrical Data: The lower half of main screen is changed to show the following:
 - Inverter compressor
 - Amps
 - Volts
 - Power Hz
 - Inverter control board fan Hz
 - Constant compressor
 - Current transducer value
 - Phase

In lieu of connecting to the outdoor unit, user has the option to connect to the indoor unit with the use of a USB to RS-485 connector kit. When connected through the indoor unit, user will not be able to record data.

This software can be used to both commission new systems and troubleshoot existing systems. LGMV data can be recorded to a ".CSV" file and emailed to an LG representative to assist with diagnostic evaluations.

Recommended Minimum PC Configuration:


- CPU: Pentium® IV 1.6 GHz
- Operating System: Windows® NT/2000/XP/Vista
- Main Memory: 256 MB
- Hard Disk: 600 MB when operating
- Web Browser: Internet Explorer® 5.0

LGMV is available in different formats, including Mobile LGMV, which is a app for use on wireless devices. Contact your LG Sales Representative for more information.



- Model no. of outdoor units
- Site name
- Total number of connected indoor units
- Communication indicator lights
- Indoor unit capacity
- Indoor unit operating mode
- Indoor unit fan speed
- Indoor unit EEV position
- Indoor unit room temperature
- Indoor unit inlet pipe temperature
- Indoor unit outlet pipe temperature
- Indoor unit error code

Figure 28: Sample Cycleview.

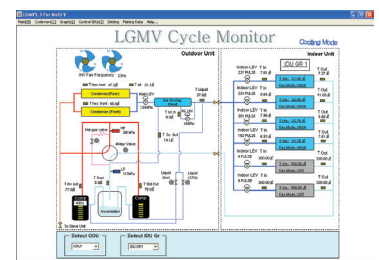

LG Smart ThinQ


LG Smart ThinQ is a built-in Wi-Fi module, along with a free smart phone app that provides monitoring and remote control capabilities for certain LG single zone systems. The app has the following features and benefits:

- Sign in to the app using LG credentials, or using Google® or Facebook® login credentials. Users only have to log in to the app once; the app remembers login details for subsequent logins.
- View current temperature settings of the air conditioning unit and change temperature, fan speed, and air flow direction from anywhere in the house or at a remote location (through the use of wireless connection). Multiple users can control the household air conditioning unit remotely.
- Monitor filter usage of the unit.
- Set up weekly schedules to start and stop air conditioner activity.
- Set up the unit to run in different Modes, depending on the user's schedule. Set up specific temperatures for when the user is home, away on vacation, or sleeping.
- Troubleshoot problems, and view tips on general maintenance of the system using the Smart Diagnosis function.

**Google is a registered trademark of Google Inc.; Facebook is a registered trademark of Facebook.*

Contact your LG Sales Representative or visit www.lg-dfs.com for system requirements, how to download the app, a user's manual, or other information.

Figure 29: Example of an LG Smart ThinQ Screen (appearances may differ depending on version of software).

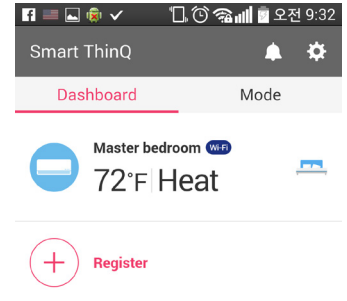

CEILING-CONCEALED DUCTED UNIT PERFORMANCE DATA

[Cooling Capacity Data on page 41](#)

[Heating Capacity Data on page 43](#)

[Maximum Heating Capacity Data on page 45](#)

PERFORMANCE DATA

High Static Ducted Cooling Capacity Tables

Cooling Capacity Table for LH240HV (LHN248HV + LUU240HV)

Table 20: LH240HV Ceiling-Concealed Ducted (High Static) System Cooling Capacity Table.

Outdoor Air Temp. (°F DB)	Indoor Air Temp. °F DB / °F WB																	
	68 / 57			72 / 61			77 / 64			80 / 67			86 / 72			90 / 75		
	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
-4	23.60	18.47	1.21	25.06	19.51	1.26	26.53	18.89	1.30	27.58	19.29	1.32	29.46	19.45	1.34	30.92	19.82	1.37
-0.4	23.58	18.58	1.23	25.05	19.63	1.27	26.51	19.00	1.32	27.57	19.40	1.33	29.44	19.57	1.36	30.91	19.94	1.38
5	23.56	18.74	1.25	25.03	19.80	1.29	26.49	19.17	1.34	27.55	19.57	1.35	29.42	19.74	1.38	30.88	20.11	1.41
10	23.55	18.89	1.26	25.01	19.95	1.31	26.47	19.32	1.36	27.53	19.73	1.37	29.39	19.89	1.40	30.86	20.27	1.43
15	23.53	19.04	1.28	24.99	20.11	1.33	26.45	19.47	1.38	27.50	19.88	1.39	29.37	20.05	1.42	30.83	20.43	1.45
20	23.51	19.19	1.30	24.97	20.27	1.35	26.43	19.63	1.40	27.48	20.04	1.41	29.35	20.21	1.44	30.81	20.59	1.47
25	23.49	19.34	1.32	24.95	20.43	1.37	26.41	19.78	1.42	27.46	20.19	1.43	29.33	20.36	1.46	30.79	20.75	1.49
30	23.47	19.48	1.34	24.93	20.58	1.39	26.39	19.93	1.44	27.44	20.35	1.45	29.30	20.52	1.48	30.76	20.91	1.51
35	23.46	19.63	1.36	24.91	20.74	1.41	26.37	20.08	1.46	27.42	20.50	1.47	29.28	20.68	1.50	30.74	21.07	1.53
40	23.44	19.78	1.38	24.89	20.89	1.43	26.35	20.23	1.48	27.40	20.66	1.49	29.26	20.83	1.52	30.72	21.23	1.55
45	23.42	19.93	1.39	24.87	21.05	1.44	26.33	20.38	1.50	27.38	20.81	1.51	29.24	20.99	1.54	30.69	21.38	1.57
50	23.40	20.07	1.41	24.85	21.21	1.46	26.31	20.53	1.52	27.36	20.97	1.53	29.21	21.14	1.56	30.67	21.54	1.59
55	23.38	20.22	1.43	24.84	21.36	1.48	26.29	20.68	1.54	27.34	21.12	1.55	29.19	21.30	1.58	30.64	21.70	1.62
60	23.37	20.37	1.45	24.82	21.52	1.50	26.27	20.83	1.56	27.32	21.27	1.57	29.17	21.45	1.60	30.62	21.86	1.64
65	23.35	20.52	1.47	24.80	21.67	1.52	26.25	20.98	1.58	27.29	21.43	1.59	29.15	21.61	1.62	30.60	22.02	1.66
70	23.33	20.66	1.49	24.78	21.83	1.54	26.23	21.13	1.60	27.27	21.58	1.61	29.13	21.76	1.64	30.57	22.17	1.68
75	22.77	20.32	1.57	24.21	21.49	1.62	25.66	20.84	1.68	26.70	21.29	1.70	28.55	21.50	1.73	29.99	21.92	1.77
80	22.21	19.97	1.65	23.65	21.16	1.71	25.09	20.53	1.77	26.13	21.00	1.79	27.97	21.23	1.82	29.42	21.66	1.86
85	21.65	19.61	1.73	23.09	20.80	1.79	24.53	20.21	1.85	25.57	20.69	1.88	27.40	20.94	1.91	28.84	21.39	1.95
90	21.09	19.24	1.81	22.53	20.44	1.87	23.96	19.89	1.94	25.00	20.37	1.96	26.83	20.65	2.00	28.27	21.11	2.04
95	20.49	19.04	1.89	21.92	20.25	1.96	23.35	19.73	2.03	24.00	19.92	2.05	26.20	20.54	2.09	27.63	21.02	2.13
100	19.99	18.53	1.97	21.42	19.74	2.04	22.85	19.26	2.11	23.69	19.61	2.14	25.70	20.09	2.18	27.13	20.59	2.22
105	19.49	18.02	2.05	20.92	19.23	2.12	22.35	18.79	2.20	23.38	19.30	2.22	25.20	19.65	2.27	26.63	20.16	2.31
110	18.99	17.40	2.13	20.42	18.61	2.20	21.85	18.21	2.28	22.88	18.73	2.31	24.70	19.09	2.35	26.13	19.60	2.40
115	18.49	16.88	2.21	19.92	18.09	2.29	21.35	17.73	2.37	22.38	18.25	2.40	24.20	18.64	2.44	25.63	19.16	2.49
118	18.19	16.76	2.26	19.62	17.98	2.34	21.05	17.64	2.42	22.08	18.17	2.45	23.90	18.57	2.50	25.33	19.11	2.55
122	18.10	16.72	2.32	19.52	17.94	2.40	20.95	17.61	2.49	21.98	18.14	2.52	23.81	18.55	2.57	25.23	19.09	2.62

TC = Total Capacity (kBtu/h).

SHC: Sensible Heat Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal cooling capacity rating obtained with air entering the indoor unit at 80°F dry bulb (DB) and 67°F wet bulb (WB), and outdoor ambient conditions of 95°F dry bulb (DB) and 75°F wet bulb (WB).

Cooling range can be extended from 0°F down to -4°F using the Low Ambient Wind Baffle Kit (sold separately).

The shaded table rows indicate reference data. When operating at this temperature, these values can be different if the system is not running consistently.

PERFORMANCE DATA

High Static Ducted Cooling Capacity Tables

Cooling Capacity Table for LH360HV (LHN368HV + LUU360HV)

Table 21: LH360HV Ceiling-Concealed Ducted (High Static) System Cooling Capacity Table.

Outdoor Air Temp. (°F DB)	Indoor Air Temp. °F DB / °F WB																	
	68 / 57			72 / 61			77 / 64			80 / 67			86 / 72			90 / 75		
	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
-4	35.39	25.43	1.80	37.59	26.87	1.86	39.79	26.01	1.93	41.38	26.56	1.95	44.19	26.79	1.99	46.38	27.29	2.03
-0.4	35.37	25.58	1.82	37.57	27.02	1.88	39.77	26.17	1.95	41.35	26.72	1.98	44.16	26.94	2.01	46.36	27.45	2.05
5	35.34	25.80	1.85	37.54	27.26	1.92	39.73	26.39	1.99	41.32	26.95	2.01	44.12	27.18	2.05	46.32	27.69	2.09
10	35.32	26.01	1.88	37.51	27.48	1.94	39.70	26.60	2.01	41.29	27.16	2.04	44.09	27.39	2.08	46.28	27.91	2.12
15	35.29	26.22	1.90	37.48	27.69	1.97	39.67	26.81	2.04	41.26	27.38	2.07	44.06	27.61	2.11	46.25	28.13	2.15
20	35.26	26.42	1.93	37.45	27.91	2.00	39.64	27.02	2.07	41.23	27.59	2.10	44.02	27.83	2.14	46.21	28.35	2.18
25	35.24	26.63	1.96	37.43	28.13	2.03	39.61	27.23	2.10	41.19	27.81	2.13	43.99	28.04	2.17	46.18	28.57	2.21
30	35.21	26.83	1.98	37.40	28.34	2.06	39.58	27.44	2.13	41.16	28.02	2.16	43.96	28.26	2.20	46.14	28.79	2.24
35	35.18	27.03	2.01	37.37	28.56	2.09	39.55	27.65	2.16	41.13	28.23	2.19	43.92	28.47	2.23	46.11	29.01	2.27
40	35.16	27.24	2.04	37.34	28.77	2.11	39.52	27.86	2.19	41.10	28.45	2.22	43.89	28.69	2.26	46.07	29.23	2.30
45	35.13	27.44	2.07	37.31	28.99	2.14	39.49	28.07	2.22	41.07	28.66	2.25	43.86	28.90	2.29	46.04	29.45	2.33
50	35.10	27.64	2.09	37.28	29.20	2.17	39.46	28.27	2.25	41.04	28.87	2.28	43.82	29.11	2.32	46.00	29.66	2.36
55	35.08	27.85	2.12	37.25	29.42	2.20	39.43	28.48	2.28	41.01	29.08	2.31	43.79	29.33	2.35	45.97	29.88	2.40
60	35.05	28.05	2.15	37.23	29.63	2.23	39.40	28.69	2.31	40.97	29.29	2.33	43.76	29.54	2.38	45.93	30.10	2.43
65	35.02	28.25	2.18	37.20	29.84	2.26	39.37	28.89	2.34	40.94	29.50	2.36	43.72	29.75	2.41	45.90	30.32	2.46
70	34.99	28.45	2.20	37.17	30.05	2.28	39.34	29.10	2.37	40.91	29.71	2.39	43.69	29.96	2.44	45.86	30.53	2.49
75	34.15	27.98	2.32	36.32	29.60	2.41	38.49	28.69	2.49	40.05	29.32	2.52	42.82	29.60	2.57	44.99	30.19	2.62
80	33.31	27.50	2.44	35.47	29.13	2.53	37.64	28.27	2.62	39.20	28.91	2.65	41.96	29.23	2.70	44.12	29.83	2.76
85	32.48	27.00	2.56	34.63	28.64	2.65	36.79	27.83	2.75	38.35	28.49	2.78	41.10	28.83	2.83	43.26	29.46	2.89
90	31.64	26.49	2.68	33.79	28.14	2.78	35.94	27.38	2.88	37.50	28.05	2.91	40.25	28.43	2.97	42.40	29.07	3.02
95	30.74	26.21	2.80	32.88	27.89	2.90	35.02	27.17	3.01	36.00	27.43	3.04	39.30	28.28	3.10	41.44	28.94	3.16
100	29.99	25.51	2.92	32.13	27.18	3.02	34.27	26.52	3.13	35.53	27.01	3.17	38.55	27.67	3.23	40.69	28.35	3.29
105	29.24	24.81	3.04	31.38	26.48	3.15	33.52	25.88	3.26	35.07	26.58	3.30	37.80	27.06	3.36	39.94	27.75	3.43
110	28.49	23.96	3.15	30.63	25.62	3.27	32.77	25.08	3.39	34.32	25.79	3.43	37.05	26.29	3.49	39.20	27.00	3.56
115	27.74	23.25	3.27	29.88	24.90	3.39	32.02	24.41	3.52	33.57	25.13	3.56	36.31	25.66	3.62	38.45	26.38	3.70
118	27.29	23.08	3.34	29.43	24.75	3.47	31.57	24.29	3.59	33.12	25.02	3.63	35.86	25.58	3.70	38.00	26.31	3.78
122	27.14	23.02	3.44	29.28	24.70	3.56	31.43	24.25	3.69	32.97	24.98	3.74	35.71	25.55	3.81	37.85	26.28	3.88

TC = Total Capacity (kBtu/h).

SHC: Sensible Heat Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal cooling capacity rating obtained with air entering the indoor unit at 80°F dry bulb (DB) and 67°F wet bulb (WB), and outdoor ambient conditions of 95°F dry bulb (DB) and 75°F wet bulb (WB).

Cooling range can be extended from 0°F down to -4°F using the Low Ambient Wind Baffle Kit (sold separately).

The shaded table rows indicate reference data. When operating at this temperature, these values can be different if the system is not running consistently.

PERFORMANCE DATA

High Static Ducted Heating Capacity Tables

Heating Capacity Table for LH240HV (LHN248HV + LUU240HV)

Table 22: LH240HV Ceiling-Concealed Ducted (High Static) System Heating Capacity Table.

Outdoor Air Temp.		Indoor Air Temp. °F DB											
°F DB	°F WB	61		64		68		70		72		75	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-4	-4.4	13.03	1.59	12.24	1.64	12.06	1.69	11.89	1.72	11.76	1.74	11.26	1.79
0	-0.4	14.47	1.63	13.71	1.68	13.44	1.74	13.23	1.76	13.07	1.79	12.53	1.84
5	4.5	16.07	1.68	15.34	1.74	14.96	1.79	14.72	1.82	14.52	1.84	13.94	1.90
10	9	17.43	1.73	16.73	1.79	16.26	1.84	15.98	1.87	15.76	1.90	15.14	1.95
17	15	19.07	1.79	18.40	1.85	17.82	1.91	17.50	1.94	17.24	1.97	16.58	2.02
20	19	20.10	1.84	19.46	1.89	18.81	1.95	18.46	1.99	18.18	2.01	17.49	2.07
25	23	21.84	1.88	21.19	1.94	20.46	2.00	20.07	2.03	19.76	2.06	19.02	2.12
30	28	23.60	1.93	22.87	1.99	22.08	2.05	21.67	2.09	21.35	2.12	20.57	2.18
35	32	25.35	1.97	24.54	2.03	23.71	2.10	23.28	2.13	22.94	2.16	22.11	2.23
40	36	26.64	2.01	25.89	2.08	25.07	2.14	24.63	2.18	24.29	2.21	23.41	2.28
45	41	28.26	2.06	27.58	2.13	26.77	2.20	26.32	2.24	25.97	2.27	25.02	2.34
47	43	28.90	2.08	28.26	2.15	27.45	2.22	27.00	2.26	26.64	2.29	25.67	2.36
50	46	28.99	2.07	28.40	2.13	27.70	2.19	27.30	2.23	26.98	2.25	26.07	2.31
55	51	29.13	2.05	28.65	2.10	28.12	2.15	27.79	2.17	27.54	2.19	26.72	2.24
60	56	29.27	2.03	28.89	2.07	28.53	2.10	28.29	2.12	28.09	2.13	27.38	2.17
63	59	29.35	2.01	29.03	2.05	28.78	2.08	28.59	2.09	28.43	2.10	27.77	2.12
68	64	29.44	2.00	29.18	2.03	29.04	2.05	28.89	2.06	28.77	2.06	28.17	2.08

TC = Total Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

PERFORMANCE DATA

High Static Ducted Heating Capacity Tables

Heating Capacity Table for LH360HV (LHN368HV + LUU360HV)

Table 23: LH360HV4 Ceiling-Concealed Duct (High Static) System Heating Capacity Table.

Outdoor Air Temp.		Indoor Air Temp. °F DB											
°F DB	°F WB	61		64		68		70		72		75	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-4	-4.4	15.17	1.96	14.16	2.02	14.01	2.08	13.83	2.12	13.68	2.14	13.08	2.20
0	-0.4	17.79	2.06	16.81	2.12	16.50	2.19	16.26	2.22	16.06	2.25	15.39	2.32
5	4.5	20.70	2.18	19.74	2.25	19.26	2.31	18.95	2.35	18.70	2.38	17.95	2.45
10	9	23.18	2.29	22.24	2.36	21.62	2.43	21.25	2.47	20.95	2.50	20.12	2.58
17	15	26.15	2.43	25.24	2.51	24.44	2.59	24.00	2.63	23.65	2.66	22.74	2.74
20	19	28.03	2.53	27.14	2.61	26.24	2.69	25.75	2.74	25.36	2.77	24.40	2.85
25	23	31.19	2.62	30.27	2.71	29.21	2.79	28.66	2.84	28.22	2.88	27.16	2.96
30	28	34.37	2.75	33.31	2.83	32.17	2.92	31.58	2.97	31.10	3.01	29.96	3.10
35	32	37.55	2.84	36.36	2.93	35.12	3.03	34.49	3.08	33.98	3.12	32.76	3.21
40	36	39.47	2.94	38.36	3.03	37.14	3.13	36.49	3.19	35.98	3.23	34.68	3.32
45	41	41.86	3.06	40.86	3.16	39.66	3.26	39.00	3.32	38.47	3.36	37.07	3.46
47	43	42.82	3.11	41.86	3.21	40.66	3.31	40.00	3.37	39.47	3.42	38.03	3.52
50	46	42.94	3.09	42.08	3.18	41.04	3.27	40.44	3.32	39.97	3.36	38.62	3.45
55	51	43.15	3.06	42.44	3.13	41.65	3.21	41.18	3.24	40.79	3.27	39.59	3.34
60	56	43.36	3.02	42.80	3.08	42.27	3.14	41.91	3.16	41.62	3.18	40.56	3.23
63	59	43.49	3.00	43.01	3.05	42.64	3.10	42.35	3.11	42.12	3.13	41.14	3.16
68	64	43.61	2.98	43.23	3.02	43.02	3.06	42.80	3.07	42.62	3.07	41.73	3.10

TC = Total Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

PERFORMANCE DATA

High Static Ducted Maximum Heating Capacity Tables

Maximum Heating Capacity Table for LH248HV (LHN248HV + LUU240HV)

Table 24: LH240HV4 Ceiling-Concealed Duct (High Static) System Max Heating Capacity Table.

Outdoor Air Temp.		Indoor Air Temp. °F DB											
°F DB	°F WB	61		64		68		70		72		75	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-4	-4.4	22.22	2.91	21.73	3.01	21.11	3.10	20.76	3.15	20.49	3.19	19.74	3.29
0	-0.4	23.57	3.02	23.05	3.12	22.39	3.22	22.02	3.27	21.73	3.31	20.94	3.41
5	4.5	22.91	2.99	22.40	3.09	21.76	3.19	21.40	3.24	21.12	3.28	20.35	3.38
10	9	25.02	2.78	24.46	2.87	23.76	2.96	23.37	3.01	23.06	3.05	22.22	3.15
17	15	27.83	2.63	27.21	2.71	26.43	2.80	26.00	2.85	25.65	2.89	24.72	2.98
20	19	28.44	2.68	27.81	2.77	27.01	2.86	26.57	2.91	26.22	2.95	25.26	3.04
25	23	29.05	2.74	28.41	2.83	27.59	2.92	27.14	2.97	26.78	3.01	25.81	3.10
30	28	29.82	2.81	29.15	2.91	28.32	3.00	27.86	3.05	27.49	3.09	26.49	3.18
35	32	30.43	2.87	29.75	2.96	28.90	3.06	28.43	3.11	28.05	3.15	27.03	3.25
40	36	31.04	2.93	30.35	3.02	29.48	3.12	29.00	3.17	28.61	3.22	27.57	3.31
45	41	31.81	3.00	31.10	3.10	30.21	3.19	29.71	3.25	29.32	3.29	28.25	3.39
47	43	32.11	3.02	31.40	3.12	30.50	3.22	30.00	3.28	29.60	3.32	28.52	3.42
50	46	32.21	3.01	31.56	3.10	30.78	3.19	30.33	3.23	29.97	3.27	28.96	3.36
55	51	32.36	2.97	31.83	3.05	31.24	3.12	30.88	3.15	30.59	3.18	29.69	3.25
60	56	32.52	2.94	32.10	3.00	31.70	3.05	31.43	3.08	31.22	3.09	30.42	3.14
63	59	32.62	2.92	32.26	2.97	31.98	3.01	31.76	3.03	31.59	3.04	30.85	3.08
68	64	32.71	2.90	32.42	2.94	32.26	2.98	32.10	2.98	31.96	2.99	31.30	3.01

TC = Total Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

PERFORMANCE DATA

High Static Ducted Maximum Heating Capacity Tables

Maximum Heating Capacity Table for LH368HV (LHN368HV + LUU360HV)

Table 25: LH360HV4 Ceiling-Concealed Duct (High Static) System Max Heating Capacity Table.

Outdoor Air Temp.		Indoor Air Temp. °F DB											
°F DB	°F WB	61		64		68		70		72		75	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-4	-4.4	29.24	4.69	28.58	4.84	27.77	5.00	27.31	5.08	26.95	5.15	25.97	5.30
0	-0.4	32.89	4.87	32.16	5.03	31.24	5.19	30.73	5.28	30.32	5.35	29.22	5.51
5	4.5	35.97	4.86	35.16	5.02	34.16	5.18	33.60	5.27	33.15	5.34	31.95	5.50
10	9	39.59	4.89	38.71	5.05	37.60	5.21	36.99	5.30	36.49	5.37	35.17	5.53
17	15	44.42	4.91	43.43	5.07	42.19	5.23	41.50	5.32	40.95	5.39	39.46	5.55
20	19	44.53	4.70	43.53	4.86	42.29	5.02	41.60	5.10	41.05	5.17	39.55	5.33
25	23	44.64	4.50	43.64	4.65	42.39	4.80	41.70	4.88	41.15	4.95	39.65	5.10
30	28	44.77	4.25	43.77	4.39	42.52	4.53	41.83	4.61	41.27	4.67	39.77	4.81
35	32	44.88	4.05	43.88	4.18	42.62	4.32	41.93	4.39	41.37	4.45	39.86	4.58
40	36	44.98	3.85	43.98	3.97	42.72	4.10	42.03	4.17	41.47	4.23	39.96	4.36
45	41	45.12	3.60	44.11	3.71	42.85	3.83	42.15	3.90	41.59	3.95	40.08	4.07
47	43	45.17	3.49	44.16	3.61	42.90	3.73	42.20	3.79	41.64	3.84	40.13	3.96
50	46	45.30	3.47	44.39	3.58	43.29	3.68	42.66	3.74	42.16	3.78	40.74	3.88
55	51	45.53	3.44	44.77	3.52	43.94	3.60	43.44	3.65	43.04	3.68	41.76	3.76
60	56	45.75	3.40	45.15	3.47	44.60	3.53	44.21	3.56	43.91	3.58	42.79	3.63
63	59	45.88	3.38	45.38	3.43	44.99	3.48	44.68	3.50	44.43	3.51	43.40	3.56
68	64	46.01	3.36	45.61	3.40	45.38	3.44	45.15	3.45	44.96	3.45	44.02	3.48

TC = Total Capacity (kBtu/h).

PI = Power input (KW). Power input (KW) includes compressor and fan(s).

Nominal capacity as rated 0 ft. above sea level and a 0 ft. level difference between outdoor and indoor unit. Corresponding refrigerant piping length is accordance with standard length of each outdoor unit.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).



CEILING-CONCEALED DUCTED UNIT APPLICATION GUIDELINES

Equipment Selection Procedure on page 48

Placement Considerations on page 50

Clearances on page 59

Installing Outdoor Unit Indoors on page 62

Refrigerant Piping Design on page 64

EQUIPMENT SELECTION PROCEDURE

Cooling / Heating Correction Factors

For Ceiling-Concealed Ducted systems, calculate the equivalent length of the liquid line from the outdoor unit to the indoor unit. Also, determine the elevation difference of the indoor unit above or below the outdoor unit. Find corresponding cooling or heating capacity correction factors as shown below. Multiply the correction factors by the cooling or heating capacity obtained from the capacity table using design conditions. The result is the NET cooling or heating capacity.

Refrigerant Line Length Derates

For air-cooled systems, a capacity correction factor may have to be applied to account for the length of the system's refrigerant pipe. Rate of change in capacity due to increased piping lengths is shown below.

Table 26: High Static Ducted System Cooling and Heating Capacity Coefficient Factors.

Piping Length (ft.)		24.6	32.8	49.2	65.6	98.4	131.2	164.0	196.9	229.7	246.0
Cooling Capacity Coefficient Factor											
Rate of Capacity Change (%)	LH248HV (24,000 Btu/h)	100	100	99.3	97.9	96.6	93.8	91.1	-	-	-
	LH368HV (36,000 Btu/h)	100	100	99.3	97.9	96.6	93.8	91.1	88.4	85.6	82.9
Heating Capacity Coefficient Factor											
Rate of Capacity Change (%)	LH248HV (24,000 Btu/h)	100	99.3	97.9	96.6	93.8	91.1	88.4	-	-	-
	LH368HV (36,000 Btu/h)	100	99.7	99.2	98.7	97.7	96.6	95.6	94.6	93.5	93.0

Equivalent Piping Length for Piping Components

Table 27: Equivalent Piping Length for Elbows.

Component	Size (Inches)													
Elbow (ft.)	1/4	3/8	1/2	5/8	3/4	7/8	1	1-1/8	1-1/4	1-3/8	1-1/2	1-5/8	1-3/4	2-1/8
	0.5	0.6	0.7	0.8	1.2	1.3	1.5	1.6	1.8	2.0	2.1	2.3	2.5	2.8

Altitude Correction Factor

The impact of air density must be considered on systems installed at a significant altitude above sea level, therefore, locally accepted altitude correction factors must be applied.

EQUIPMENT SELECTION PROCEDURE

Defrost Correction Factor for Heating Operation

The outdoor unit heating capacity may need to be adjusted for frost accumulation on air-cooled systems. If design day conditions are below the dewpoint of the surrounding air, frost may not be a problem and no correction factor is needed. In certain weather conditions, however, frost may form and accumulate on the air-cooled outdoor unit coil and impact the coils ability to transfer heat. If significant frost accumulates on the outdoor unit coil, a defrost algorithm will start automatically. The timing between defrost periods is determined by the system's ability to achieve a target head pressure value.

Capacity and AHRI ratings tables do not factor in capacity reduction when frost has accumulated on the condenser coil, nor during defrost operation.

Integrated heating capacity values can be obtained using the formula:

$$A = B \times C$$

Where:

A = Integrated Heating Capacity.

B = Value found in the Capacity Table.

C = Correction Factor for Frost Accumulation Factor (from Table 24).

Table 28: Outdoor Unit Frost Accumulation Factor (Heating)¹.

Entering DB (°F)	19.4	23.0	26.6	32.0	37.4	41.0	44.6
Derate factor	0.98	0.95	0.93	0.86	0.93	0.96	1.0

¹At 85% outdoor air relative humidity.

The frost accumulation factor does not account for effects of snow accumulation restricting airflow through the outdoor unit coil.

Note:

There will be temporary reduction in capacity when frost / ice accumulates on the outside surface of the outdoor unit heat exchanger. The level of capacity reduction depends on a number of factors, for example, outdoor temperature (°F DB), relative humidity (RH), and the amount of frost present.

Check the Indoor and Outdoor Unit Selection(s)

Compare the corrected cooling and heating capacities to the load calculations. Is each capacity sufficient for the zone it serves?

For each indoor unit, the corrected capacity must be at least equal to the total of the cooling design load (plus ventilation load, if applicable) for the space(s) served by the indoor unit. For each indoor unit, the corrected capacity also must be at least equal to the total of the heating design load (plus ventilation load, if applicable) for the space(s) and / or thermal zones served by the indoor unit.

The outdoor unit selected must be large enough to offset the total cooling load for all spaces it serves (account for ventilation air cooling load if the ventilation air has not been pretreated to room neutral conditions). The outdoor unit must also be large enough to offset the total heating load for all spaces it serves.

If the corrected heating capacity ratio exceeds 100%, reselect the equipment, or change the system design by moving some of the load to another system.

System Sizing Check Formulas

1. Outdoor Unit Rated Capacity.

$Q_{odu(rated)}$ (From capacity tables).

2. Outdoor Unit Capacity at T_i , T_o Temperature.

$Q_{odu(T_i, T_o)}$ (From capacity tables).

3 Outdoor Unit Capacity Coefficient Factor.

$$F_{(T_i, T_o)} = Q_{odu(T_i, T_o)} / Q_{odu(rated)}$$

4. Piping Correction Factor (From Capacity Coefficient Factor Tables).

$F_{(length)}$ for each piping length

5. Individual Indoor Unit Combination Capacity.

$$Q_{idu(combi)} = Q_{odu(rated)} \times Q_{idu(rated)} / Q_{idu(rated-total)}$$

6. Individual Indoor Unit Actual Capacity.

$$Q_{idu(actual)} = Q_{odu(combi)} \times F_{(T_i, T_o)} \times F_{(length, altitude)}$$

Conclusions and Recommendations

- Understand the design safety factors.
- Reference load calculations for actual cooling and heating capacities (applies in 99% of applications – consider total load when latent load is greater than 30%).
- Verify that the sensible load of the zone is satisfied.

- Use caution when sizing to meet listed capacity specifications for the scheduled manufacturer's equipment.

If further system design assistance is needed, or you have a unique application you would like to discuss, contact your LG sales rep.

PLACEMENT CONSIDERATIONS

Indoor Unit

Selecting the Best Location for the Indoor Unit

Note:

Follow recommended best practices when choosing an indoor location for the single zone indoor unit.

Dos

- Place the unit where air circulation will not be blocked.
- Locate the indoor unit in a location that is level, and where it can be easily connected to the outdoor unit.
- Place the unit where drainage can be obtained easily. Condensation drain must be conveniently routed away from the unit.
- Include enough space around the indoor unit so that it is accessible for maintenance and service purposes.
- Where electrical noise / electromagnetic waves will not affect indoor unit operation. Maintain proper distances between the indoor units and electric wires, audio and visual appliances, breaker / circuit panels, etc. If the frequency signal of the appliance is unstable, then install the indoor unit a minimum of ten (10) feet away, and run the power and transmission cables through a conduit.
- An area that is level and with enough strength to bear the weight of the indoor unit(s).

⊘ Dont's

- Do not install the unit near a heat or steam source, or where considerable amounts of oil, iron powder, or flour are used. (These materials may generate condensate, cause a reduction in heat exchanger efficiency, or the drain to malfunction. If this is a potential problem, install a ventilation fan large enough to vent out these materials.)
- Ensure there are no obstacles to air circulation around the unit; keep proper distances from ceilings, doorways, floor, walls, etc.
- Avoid installing the unit near high-frequency generators or near any equipment that generates an electromagnetic field (minimum 3-1/3 feet away).

⚠ WARNING

The unit must not be installed where sulfuric acid and flammable or corrosive gases are generated, vented into, or stored. There is risk of fire, explosion, and physical injury or death.

The unit may be damaged, may malfunction, and / or will not operate as designed if installed in any of the conditions listed.

Note:

- ⊘ Indoor units (IDUs) must not be placed in an environment where the IDUs may be exposed to harmful volatile organic compounds (VOCs) or in environments where there is improper air make up or supply or inadequate ventilation. If there are concerns about VOCs in the environment where the IDUs are installed, proper air make up or supply and/ or adequate ventilation must be provided. Additionally, in buildings where IDUs will be exposed to VOCs consider a factory-applied epoxy coating to the fan coils for each IDU.
- If the unit is installed near a body of water, the installation parts are at risk of corroding. Appropriate anti-corrosion methods must be taken for the unit and all installation parts.

Installing in an Area Exposed to Unconditioned Air

In some installation applications, areas (floors, walls) in some rooms may be exposed to unconditioned air (room may be above or next to an unheated garage or storeroom). To countermeasure:


- Verify that carpet is or will be installed (carpet may increase the temperature by three [3] degrees).
- Add insulation between the floor joists.
- Install radiant heat or another type of heating system to the floor.

Installing in an Area with High Humidity Levels

If the environment is prone to humidity levels of 80% or more (near the ocean, lakes, etc.) or where steam could collect in the plenum:

- Install additional insulation to the indoor unit (glass wool insulation >13/32 inches thick).
- Install additional insulation to the refrigerant piping (insulation >13/16 inches thick).
- Seal all gaps between the indoor unit and the ceiling tiles (make the area air tight) so that humidity does not transfer from the plenum to the conditioned space. Also, add a ceiling grille for ventilation.

Figure 30: Installing Near a Heat or Steam Source.

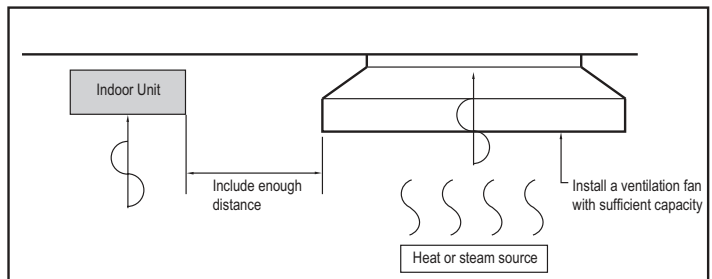

PLACEMENT CONSIDERATIONS

Indoor Unit

High Static Ducted IDU Service Space Required Dimensions, Bolt Locations

Figure 31: High Static Ducted Indoor Unit Bolt Locations.

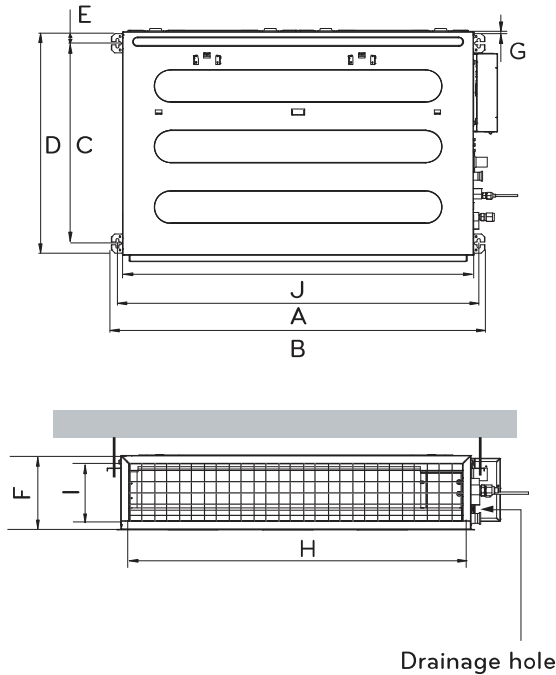


Table 29: High Static Ducted Indoor Unit Bolt Location Dimensions.


Model / Capacity (Btu/h)	Dimensions (inches)									
	A	B	C	D	E	F	G	H	I	J
LHN248HV / 24,000	36-3/4	38-1/4	24-3/8	27-9/16	1-3/16	10-5/8	19/32	33-25/32	7-15/16	35-7/16
LHN368HV / 36,000	50-17/32	52-1/32	24-3/8	27-9/16	1-3/16	10-5/8	19/32	47-9/16	7-15/16	49-7/32

Figure 32: High Static Ducted IDU Access Panel Required Dimensions.

Table 30: High Static Ducted Indoor Unit Bolt Location Dimensions.

Model / Capacity (Btu/h)	Dimensions (in.)	
	A	B
LHN248HV	31-1/2	39-3/4
LHN368HV	31-1/2	53-1/2

Refer to figure 48 on the right.

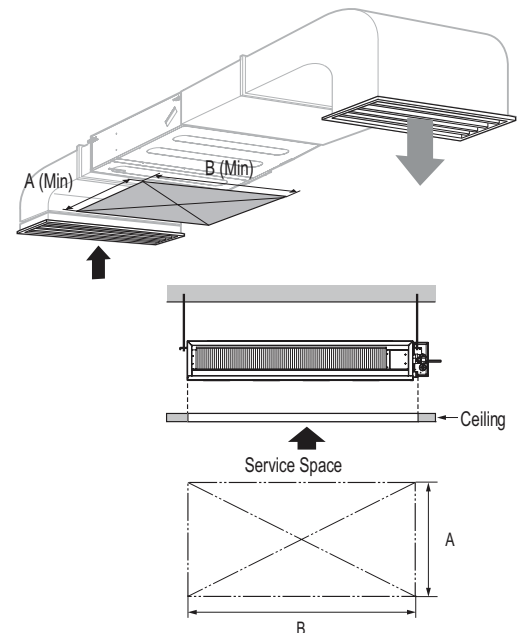


PLACEMENT CONSIDERATIONS

Indoor Unit

Indoor Unit Drain System

- Drain piping must have downward gradient of at least 1/50 to 1/100; ⚡ to prevent reverse flow, slope must not be straight up and down.
- ⚡ Do not damage the drain port on the indoor unit when connecting the field-supplied drain piping.
- Drain piping specifications:
 - Indoor Unit Drain Connection: 1-1/4 inch outside diameter.
 - Field-Supplied Drain Piping: Polyvinyl chloride piping with 1-inch inside diameter and pipe fittings.



Figure 34: Drain Piping Installation Dimensions.

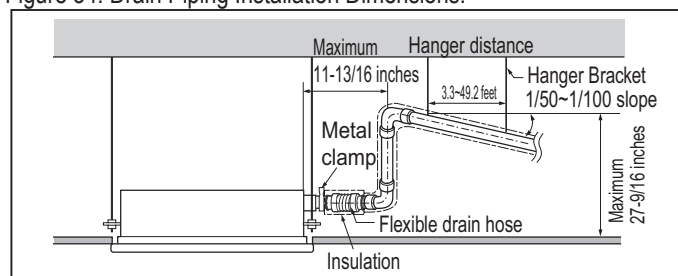

Note:

Indoor unit appearances may vary depending on the model.

Figure 33: Indoor Unit Drain Piping.

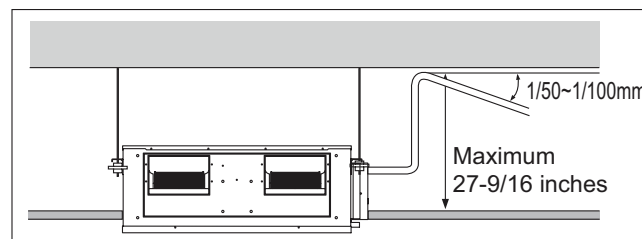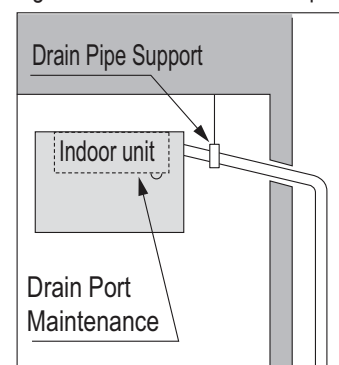

Note:

Indoor unit appearances may vary depending on the model.

PLACEMENT CONSIDERATIONS

Outdoor Unit

Selecting the Best Location for the Outdoor Unit

DANGER

- ⊘ Do not install the unit in an area where combustible gas may generate, flow, stagnate, or leak. These conditions can cause a fire, resulting in bodily injury or death.
- ⊘ Do not install the unit in a location where acidic solution and spray (sulfur) are often used as it can cause bodily injury or death.
- ⊘ Do not use the unit in environments where oil, steam, or sulfuric gas are present as it can cause bodily injury or death.

WARNING

When deciding on a location to place the outdoor unit, be sure to choose an area where run-off from defrost will not accumulate and freeze on sidewalks or driveways, which may create unsafe conditions. Properly install and insulate any drain hoses to prevent the hose from freezing, cracking, leaking, and causing unsafe conditions from frozen condensate.

Install a fence to prevent vermin from crawling into the unit or unauthorized individuals from accessing it. Follow the placement guidelines set forth in "Clearance Requirements".

Select a location for installing the outdoor unit that will meet the following conditions:

- Where there is enough strength to bear the weight of the outdoor unit.
- A location that allows for optimum air flow and is easily accessible for inspection, maintenance, and service.
- Where piping between the outdoor unit and indoor unit(s) are within allowable limits.
- Include space for drainage to ensure condensate flows properly out of the unit when it is in heating mode. Avoid placing the outdoor unit in a low-lying area where water could accumulate.
- If the outdoor unit is installed in a highly humid environment (near an ocean, lake, etc.), ensure that the site is well-ventilated and has a lot of natural light (Example: Install on a rooftop).



Don'ts

- Where it will be subjected to direct thermal radiation from other heat sources, or an area that would expose the outdoor unit to heat or steam like discharge from boiler stacks, chimneys, steam relief ports, other air conditioning units, kitchen vents, plumbing vents, and other sources of extreme temperatures.
- Where high-frequency electrical noise / electromagnetic waves will not affect operation.
- Where operating sound from the unit will disturb inhabitants of surrounding buildings.
- Where the unit will be exposed to direct, strong winds.
- Where the discharge of one outdoor unit will blow into the inlet side of an adjacent unit (when installing multiple outdoor units).

Note:

The indoor unit may take longer to provide heat, or heating performance will be reduced in winter if the unit is installed:

1. In a narrow, shady location.
2. Near a location that has a lot of ground moisture.
3. In a highly humid environment.
4. In an area in which condensate does not drain properly.

PLACEMENT CONSIDERATIONS

Outdoor Unit

Outdoor Unit Condensate Drain Piping

Outdoor unit requires condensate drain piping. Condensate drain pipe is constructed with materials approved by local code. See Placement Considerations for information in reference to outdoor unit placement.

Planning for Snow and Ice

To ensure the outdoor unit operates properly, certain measures are required in locations where there is a possibility of heavy snowfall or severe windchill or cold:

1. Prepare for severe winter wind chills and heavy snowfall, even in areas of the country where these are unusual phenomena.
2. Position the outdoor unit so that its airflow fans are not buried by direct, heavy snowfall. If snow piles up and blocks the airflow, the system may malfunction.
3. Remove any snow that has accumulated four (4) inches or more on the top of the outdoor unit.
4. In climates that may experience significant snow buildup, mount the outdoor unit on a raised, field-provided platform or stand. The raised support platform must be high enough to allow the unit to remain above possible snow drifts, and must be higher than the maximum anticipated snowfall for the location.
5. Design the mounting base to prevent snow accumulation on the platform in front or back of the unit frame.
6. Provide a field fabricated snow protection hood to keep snow and ice and/or drifting snow from accumulating on the coil surfaces.
7. Install a hail guard kit and air guide accessories (sold separately) to prevent snow or rain from accumulating on the fan inlet / outlet guards.
8. Consider tie-down requirements in case of high winds or where required by local codes.

CAUTION

When deciding on a location to place the outdoor unit, be sure to choose an area where run-off from defrost will not accumulate and freeze on sidewalks or driveways, which may create unsafe conditions.

Note:

Choose an area where run-off from defrost mode will not accumulate and freeze on sidewalks or driveways. Properly install and insulate any drain hoses to prevent the hose from freezing, cracking, leaking, and damaging the outdoor unit.

PLACEMENT CONSIDERATIONS

Outdoor Unit

Underground Refrigerant Piping

Refrigerant pipe installed underground must be routed inside a vapor tight protective sleeve to prevent insulation deterioration and water infiltration. Refrigerant pipe installed inside underground casing must be continuous without any joints. Underground refrigerant pipe must be located at a level **below the frost line**.

Table 32: Utility Conduit Sizes (Inches).

Liquid Pipe ¹	Vapor Pipe ¹		
	3/8 (1-1/8 ^{2,3})	1/2 (2.0 ^{2,4})	5/8 (2-1/8 ^{2,4})
1/4 (1.0) ⁴	4	4	4
3/8 (1-1/8) ⁴	4	4	4

¹OD pipe diameter in inches; Values in parenthesis () indicate OD of pipe with insulation jacket.

²Diameter of pipe with insulation. Thickness of pipe insulation is typical. Actual required thickness may vary based on surrounding ambient conditions and must be calculated and specified by the design engineer.

³Insulation thickness (value in parenthesis) = 3/8 inch.

⁴Insulation thickness (value in parenthesis) = 3/4 inch.

Figure 36: Typical Arrangement of Refrigerant Pipe and Cable(s) in a Utility Conduit.

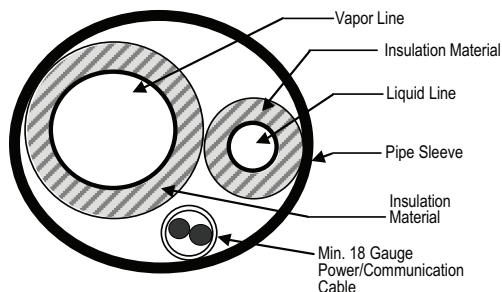


Table 33: Outdoor Unit Refrigerant Pipe Connections (All Brazed Type).

Model	Liquid Conn. (inches)	Vapor Conn. (inches)
LD097HV4, LD127HV4	1/4	3/8
LD187HV4	1/4	1/2
LH248HV4, LH368HV4	3/8	5/8

Tie-Downs, Wind Restraints, and Lightning Protection

Tie-Downs

- The strength of the roof must be checked before installing the outdoor units.
- If the installation site is prone to high winds or earthquakes, when installing on the wall or roof, securely anchor the mounting base using a field-provided tie-down configuration approved by a local professional engineer.
- The overall tie-down configuration must be approved by a local professional engineer. Always refer to local code when using a wind restraint system.

Note:

Always refer to local code when designing a wind restraint system.

Lightning Protection


- To protect the outdoor unit from lightning, place the unit within the specified lightning safety zone.

Table 31: Safety Zone Specifications.

Building Height (feet)	66	98	148	197
Protection Angle (°)	55	45	35	25

- Power cable and communication cable must be installed five (5) feet away from lightning rod.
- A high-resistance ground system must be included to protect against induced lightning or indirect strike.

Figure 35: Lightning Protection Diagram.

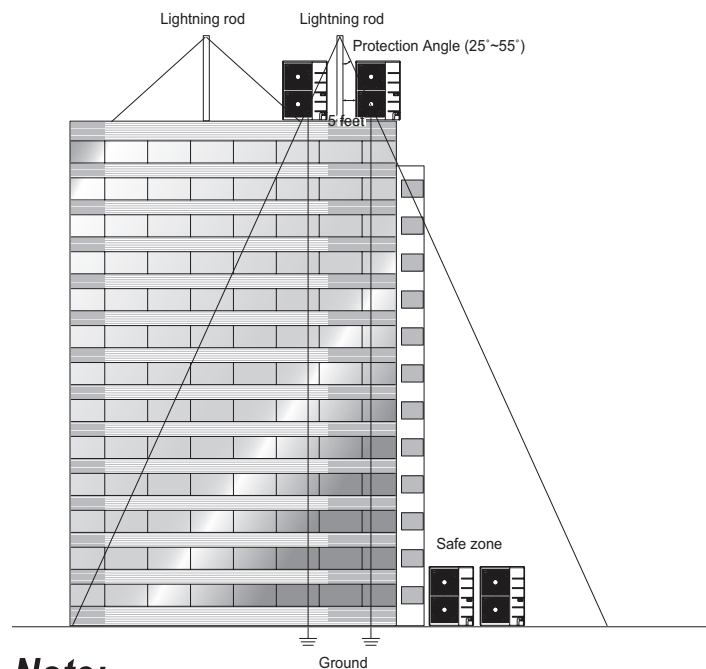

Note:

If the building does not include lightning protection, the outdoor unit may be damaged from a lightning strike. Inform the customer of this possibility in advance.

PLACEMENT CONSIDERATIONS

Outdoor Unit

Oceanside Applications

Wind Protection

If the outdoor unit is placed on a roof, position it with the compressor end (no coil surface) in the direction of the prevailing wind as shown in the figure at right. In cooler climates, it may be beneficial to position the unit in direct sunlight to assist with defrost operations.

If the outdoor unit is not placed on a roof, place it on the leeward side of the building or in a location where the unit will not be exposed to constant wind.

If placement exposes the unit to constant wind activity, construct a wind break in front of the unit. Follow the placement guidelines set forth in "Clearance Requirements".

Figure 37: Prevailing Wind Direction.


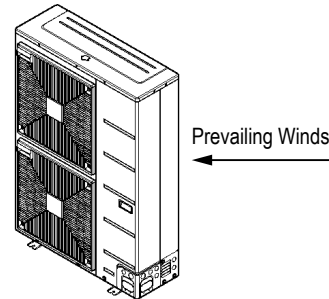


Figure 38: Leeward Side of the Building.



Figure 39: Wind Break.

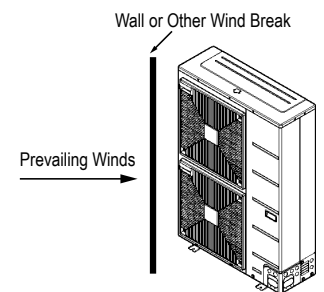

Tie-Downs and Wind Restraints

The strength of the Vertical Air Handling Unit frames is adequate to be used with field-provided wind restraint tie-downs. The overall tie-down configuration must be approved by a local professional engineer. Always refer to local code when designing a wind restraint system.

Mounting Platform

The underlying structure or foundation must be designed to support the weight of the unit. Avoid placing the unit in a low lying area where water may accumulate.

Oceanside Installation Precautions


Note:

Ocean winds may cause corrosion, particularly on the condenser and evaporator fins, which, in turn could cause product malfunction or inefficient performance.

- Avoid installing the outdoor unit where it would be directly exposed to ocean winds.
- Install the outdoor unit on the side of the building opposite from direct ocean winds.
- Select a location with good drainage.
- Periodically clean dust or salt particles off of the heat exchanger with water.


If the outdoor unit must be placed in a location where it would be subjected to direct ocean winds, install a concrete windbreaker strong enough to block any winds. Windbreaker height and width must be more than 150% of the outdoor unit, and be installed at least 27-1/2 inches away from the outdoor unit to allow for airflow.

Figure 40: Oceanside Placement Using a Building as Shield, and Placement Using a Windbreak.

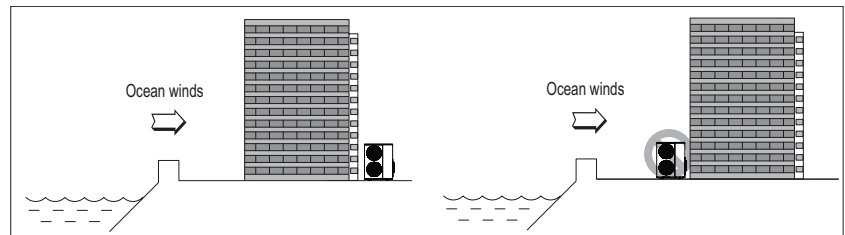

Note:

Additional anti-corrosion treatment may need to be applied to the outdoor unit at oceanside locations.

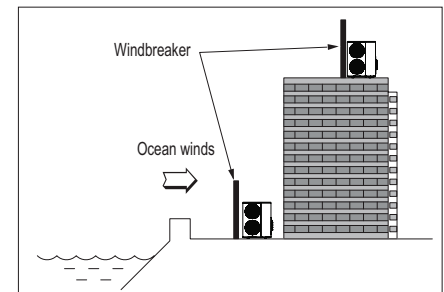

PLACEMENT CONSIDERATIONS

Outdoor Unit

General Mounting

Securely attach the outdoor unit to a condenser pad, base rails, or other mounting platform that is securely anchored to the ground or building structure. The underlying structure or foundation must be designed to support the weight of the unit, and avoid placing the outdoor unit in a low lying area where water may accumulate.

Attaching the Outdoor Unit to the Bracket

When installing the outdoor unit on a wall or roof top, anchor the mounting base securely using nails or wire with regard to wind and earthquake or vibration.

Refer to installation manual, and follow the applicable local code for clearance, mounting, anchor, and vibration attenuation requirements.

Note:

- All referenced materials are to be field-supplied.
- Images are not to scale.

Figure 42: Bolting the LUU240HV Outdoor Units to the Platform
(Appearance May Vary).


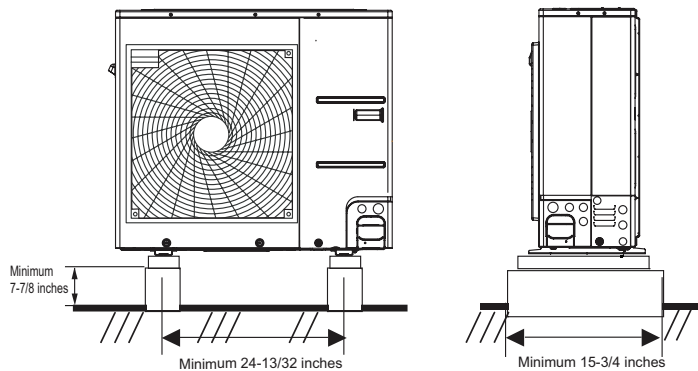


Table 34: Outdoor Unit Foundation Specifications.

Outdoor Unit	Bolt Type	Concrete Height	Bolt Depth
LUU240HV	M10-J	Minimum 7-7/8 inches	Minimum 2-3/8 inches
LUU360HV	M10-J	Minimum 7-7/8 inches	

Figure 41: Bracket Mounting.

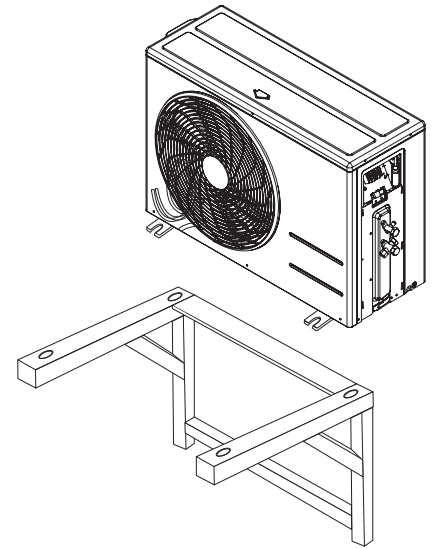

PLACEMENT CONSIDERATIONS

Outdoor Unit

Bolting the Outdoor Unit to the Platform Procedure

When installing the outdoor unit onto a concrete or rigid mount, use a bolt and nut.

1. Ensure that the concrete platform will not degrade easily, and has enough strength to bear the weight of the unit.
2. Include an H-beam support. Firmly attach the corners, otherwise the support will bend.
3. Use a hexagon nut.
4. Use anti-vibration material.
5. Include enough space around the concrete foundation for condensate drainage.
6. Seal all wiring and piping access holes to prevent bugs from entering the unit.

Concrete Platform Specifications

- Concrete foundations must be made of one part cement, two parts sand, and four parts gravel.
- The surface of the foundation must be finished with mortar with rounded edges, and weatherproofed.

Note:

- All referenced materials are to be field-supplied.
- Images are not to scale.

Figure 43: Bolting the LUU360HV Outdoor Unit to the Platform.

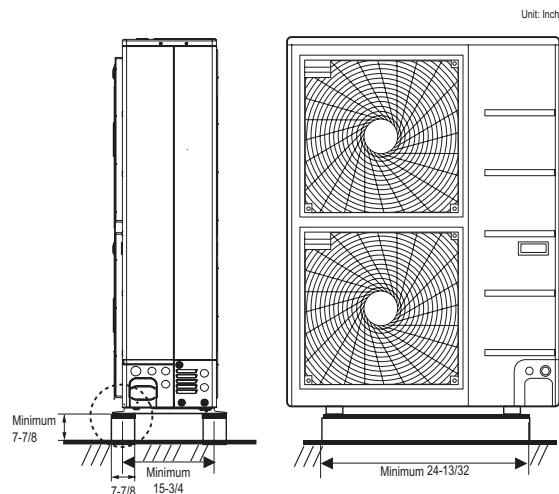


Figure 44: Platform Mounting.


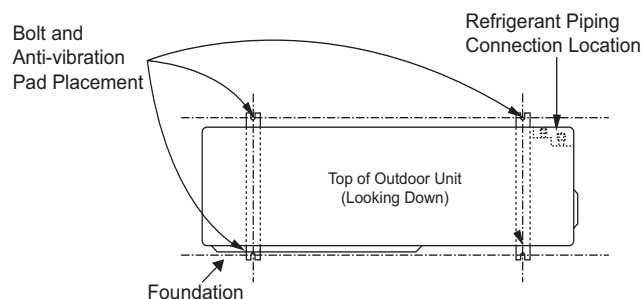


Figure 45: Close up of Bolt Attachment.

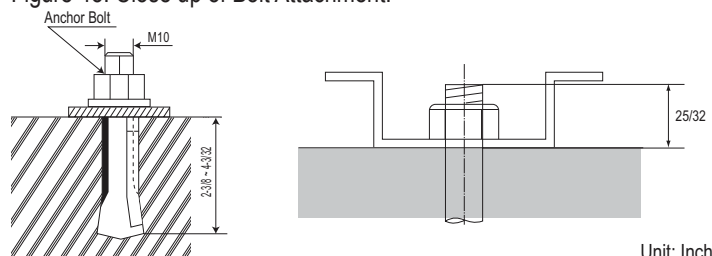

Minimum Allowable Clearance and Service Access Requirements

Proper clearance for the outdoor unit coil is critical for proper unit operation. When installing the outdoor unit, consider service, inlet and outlet and minimum allowable space requirements as illustrated in the diagrams on the following pages.

- Include enough space for airflow and for service access. If installing multiple outdoor units, avoid placing the units where the discharge of one unit will blow into the inlet side of an adjacent unit.
- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that the discharge air of the outdoor unit isn't restricted.
- ⚠ No obstacles to air circulation around the unit; keep proper distances from ceilings, fences, floor, walls, etc. (Install a fence to prevent pests from damaging the unit or unauthorized individuals from accessing it.)

Outdoor Unit (24,000 Capacity) Service Access and Allowable Clearances

Specific clearance requirements in the diagram below are for (24,000 Btu/h capacity). The figure below shows the overall minimum clearances that must be observed for safe operation and adequate airflow around the outdoor unit.

When placing the outdoor unit under an overhang, awning, sunroof or other "roof-like structure", observe the clearance requirements (as shown in Cases 1 and 2) for height in relation to the unit. To have successful service access to the outdoor unit, see the figure below for minimum spacing. When installing multiple outdoor units, see Cases 4 and 5 for correct spacing requirements.

Figure 46: 9,000 to 24,000 Capacity Outdoor Unit Service Access and Allowable Clearances Diagram.

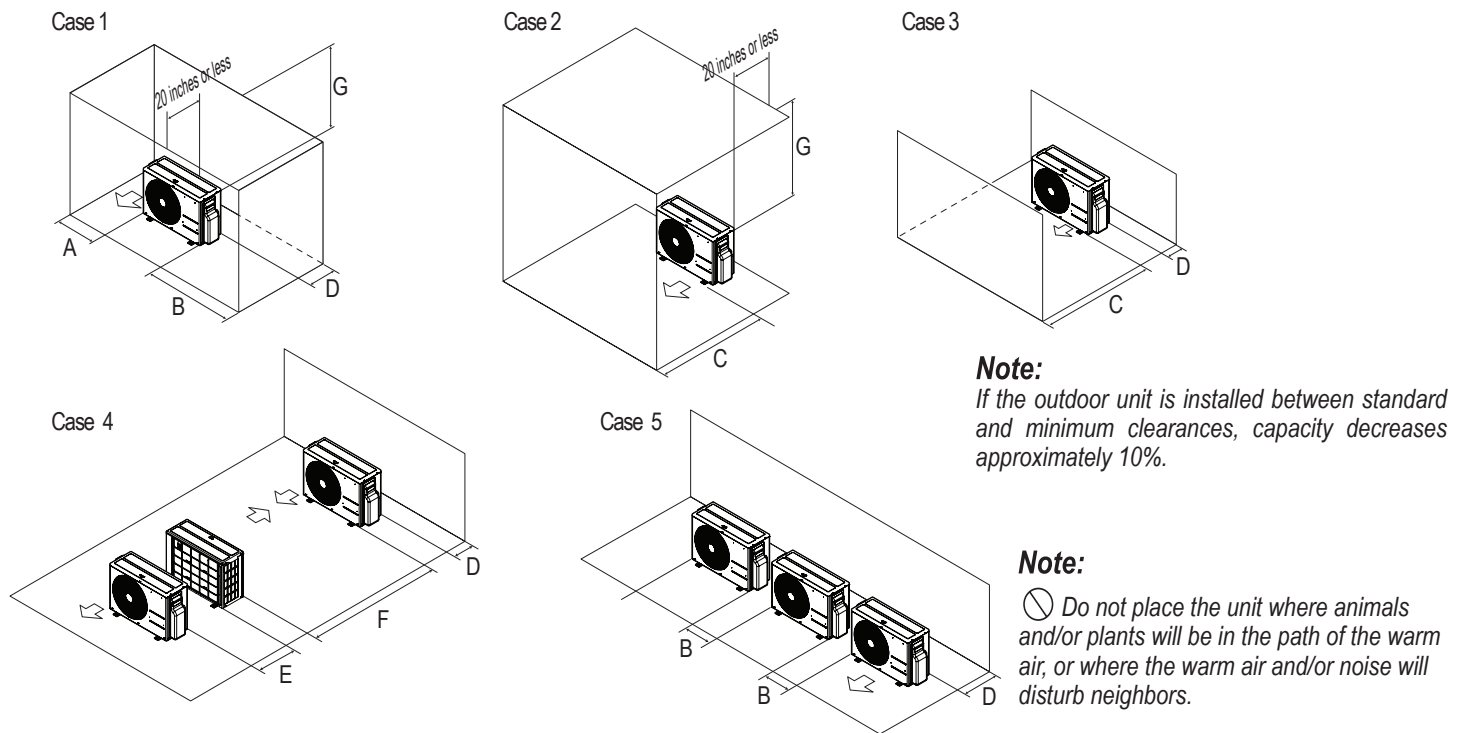


Table 35: 9,000 to 24,000 Outdoor Unit Service Access and Allowable Clearances Diagram Legend.


Unit: Inch		A	B	C	D	E	F	G
Case 1	Standard	12	24	-	12	-	-	-
	Minimum	4	10	-	4	-	-	40
Case 2	Standard	-	-	20	-	-	-	-
	Minimum	-	-	14	-	-	-	40
Case 3	Standard	-	-	20	12	-	-	-
	Minimum	-	-	14	4	-	-	-
Case 4	Standard	-	-	-	12	24	-	-
	Minimum	-	-	-	4	8	79	-
Case 5	Standard	-	24	-	12	-	-	-
	Minimum	-	10	-	4	-	-	-

CLEARANCES

Outdoor Unit

Outdoor Unit (36,000 Btu/h Capacity) Service Access and Allowable Clearances

When installing the outdoor unit, consider service, inlet, and outlet, and minimum allowable space requirements as illustrated in the following diagrams.

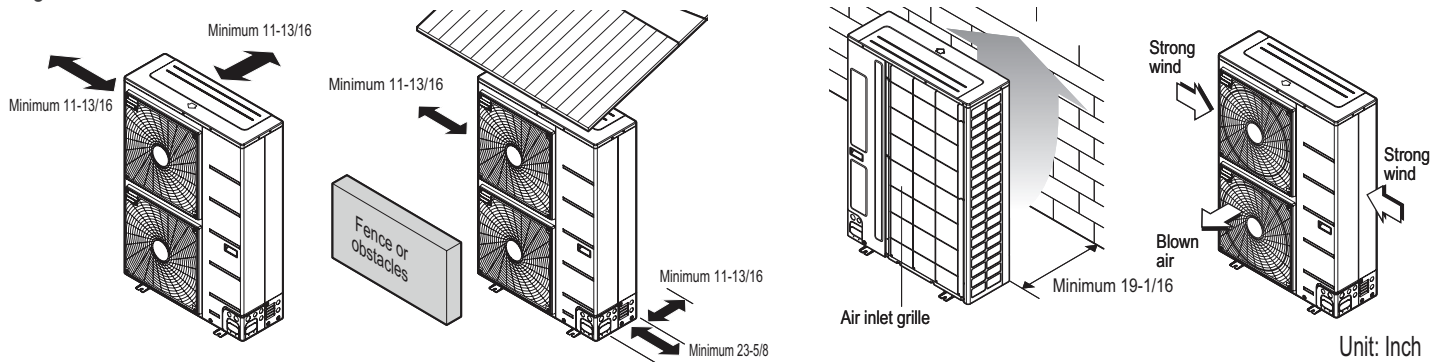


Ensure that the space at the back of the outdoor unit is a minimum of 11-13/16 inches, and include a minimum of 23-5/8 inches at the right side of the unit for service.


If the outdoor unit discharge side faces a wall, include a minimum of 19-11/16 inches between the outdoor unit and the wall. Install the outdoor unit so that the discharge port is set at a right angle to the wind direction.

Clearance Requirements when Different Obstacles are Present (Unit: Inch).



Obstacle on the suction side only.

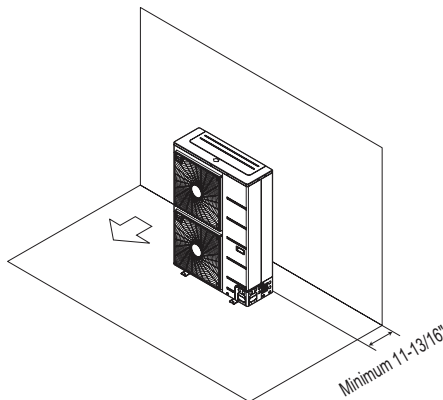

Obstacles on the suction side and on both left and right sides.

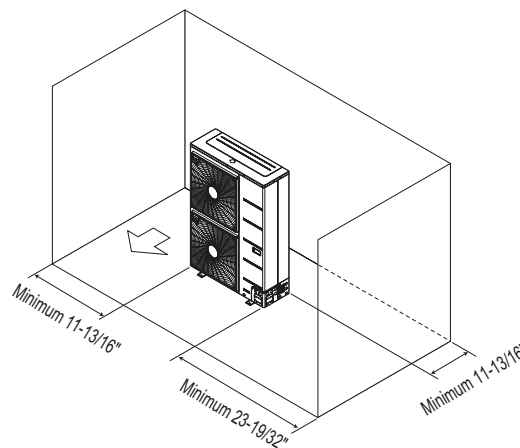


Obstacles above and on the air intake side. Obstacles above, on the air intake side, and on both left and right sides

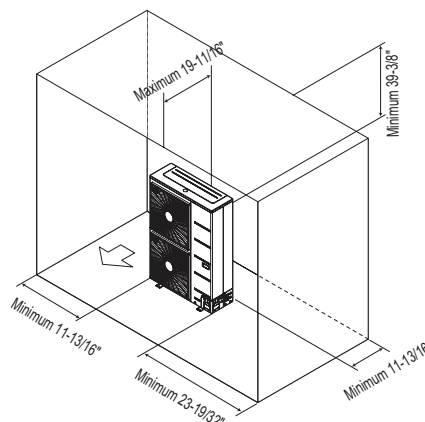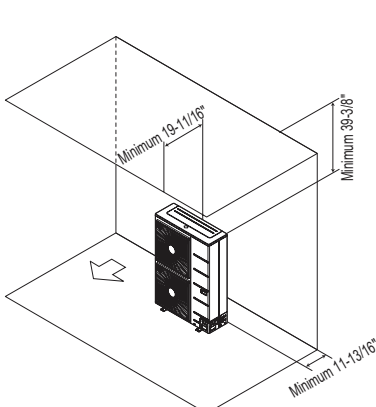


CLEARANCES

Outdoor Unit


Obstacle just on the air discharge side.

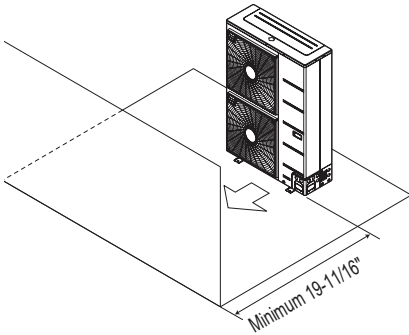

Obstacles above and on the air discharge side.

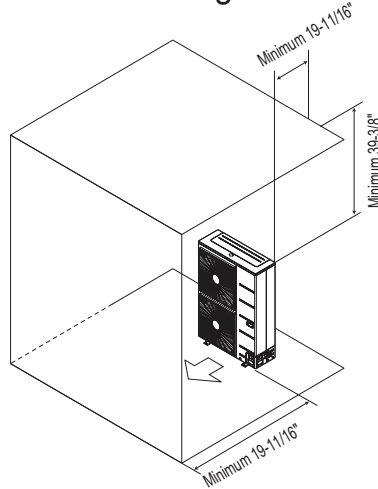

Where there are obstacles on both suction and discharge sides (discharge side obstacle is higher than the outdoor unit).

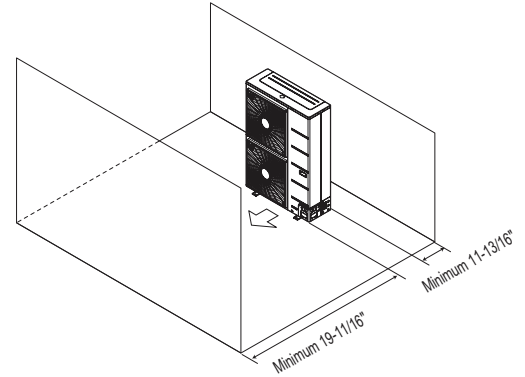

Where there are obstacles above, and on both suction and discharge sides (discharge side obstacle is higher than the outdoor unit).


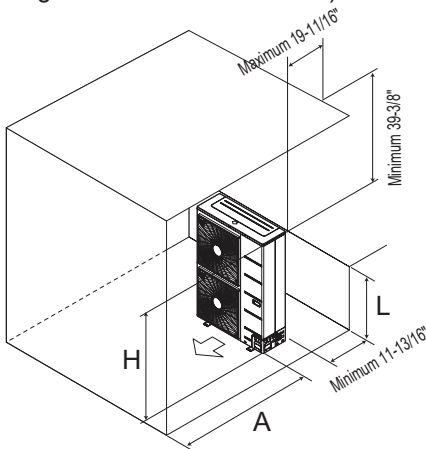


Table 36: Ratio among H, A, and L.


	L	A
$L \leq H$	$0 < L \leq 1/2 H$	29-1/32 inches
	$1/2 H < L$	39-3/8 inches
$H < L$	Set Stand as: $L \leq H$	

If a stand is necessary, it must be contained (not open frame) to prevent the discharge air from short cycling.

Where there are obstacles on both suction and discharge sides (discharge side obstacle is lower than the outdoor unit).

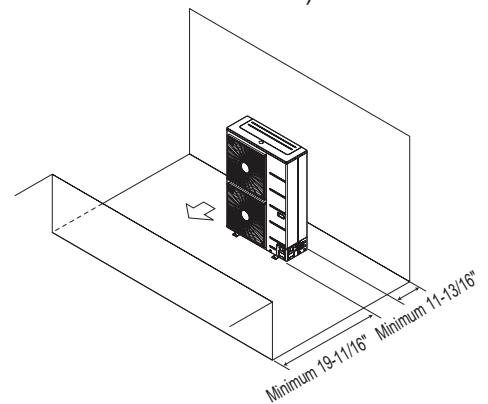


Where there are obstacles above, and on both suction and discharge sides (discharge side obstacle is lower than the outdoor unit).

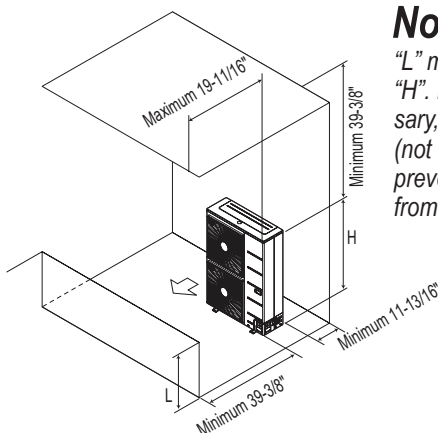

Note:

"L" must be lower than "H". If a stand is necessary, it must be contained (not open frame) to prevent the discharge air from short cycling.

Series installation

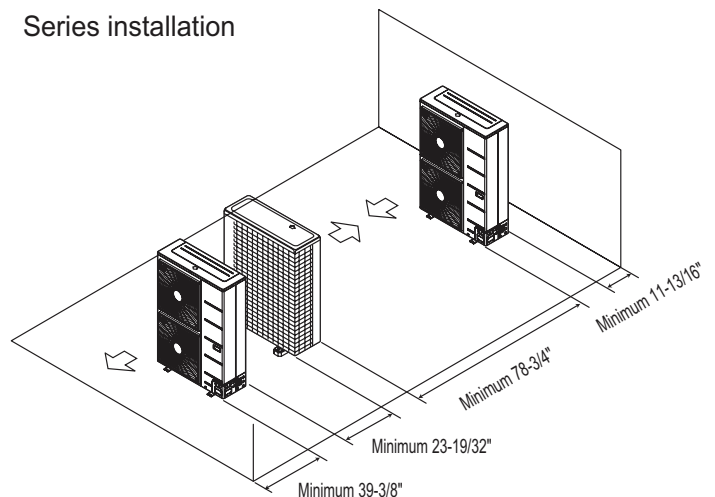

INSTALLING OUTDOOR UNITS INDOORS

Installing Outdoor Units Indoors

LG outdoor units are engineered to be mounted outdoors and include technology designed to minimize the negative effects of winter weather's freezing rain, sleet, and snow. Some building projects, however, necessitate placing the HVAC outdoor units indoors:

- Lack of ground space.
- Lack of an appropriate outdoor location that meets system design requirements.
- When mounting on the roof is not an option due to a lack of roof space.
- Roof warranty will be voided if mechanical equipment is placed on the membrane.
- On retrofit projects, a former chiller / boiler / air handler equipment room, mechanical area, or penthouse already exists.
- Where a project has vertical, self-contained VAV air handlers on each floor (in lieu of a centralized mechanical room).
- To curtail the potential need for redundant zone heating devices such as wall-fin radiators or duct heaters.
- In extremely cold environments where there is a significant amount of run-time at temperatures well below freezing outside the outdoor unit ambient air temperature range published in this engineering manual.

Benefits of Installing Outdoor Units Indoors

- Shelters the outdoor unit from direct exposure to prevailing winds that decrease the heating capability of the outdoor unit.
- Protects equipment from freezing precipitation and / or potential ice build-up that could hinder unit operation.
- Maintains coil heat transfer efficiency by reducing the number of and shortening the cycle time for defrost operation.
- Easier maintenance and servicing during inclement weather.
- When mounted in a fully enclosed space, limiting the ambient air temperature may allow the system designer to eliminate oversizing the outdoor unit to compensate for loss of capacity at low ambient temperatures.
- May also curtail the need to provide inefficient redundant zone heating devices such as wall-fin radiators and second-stage ancillary heating devices.

Design Considerations Include:

- Enclosure types and elements such as louvers, rain hoods, dampers and controls, heating methods and sizing of heating devices
- Heating strategies
- Duct design
- Condensate handling

General Guidelines

- Follow ASHRAE 62.1 design guidelines.
- Depending on the project / application, a roof over the outdoor units in combination with a wind break may be all that is necessary.
- Consider the potential for snow accumulation near louvers / roof openings. Outside air intakes and discharge ducts/louvers must be engineered to clear anticipated snow accumulation levels by at least one (1) foot.
- In situations where operation is anticipated at temperatures of -13°F and lower, ancillary heat must be provided to heat the outdoor unit coils to assure continuous compressor operation and heating.

It may be necessary to use an air guide accessory to prevent discharge air from short-cycling back to the coil inlet.

- Another option is to field manufacture ductwork and mount on top of the unit to encompass the outdoor unit fan discharge and connect to the exterior discharge grille on the building.
- Avoid using a single duct on multi-fan units to prevent short cycling. Provide a dedicated duct for each outdoor unit fan discharge.
- Consider the direction of prevailing winds and opening placement. If possible, locate inlet openings upwind of discharge openings and other exhaust outlets.
- When inlet and outlet openings are placed on the same wall, minimum distance between the two openings must be approximately three (3) feet (minimum distance varies significantly with variations in outlet opening face velocity).
- If roof-mounted ventilation openings are used, strategically locate the inlet ventilation opening(s) upwind of the outlet opening(s).
- Discharge and supply ductwork must be designed to avoid weather related long periods of water entrainment and the potential for microbial growth.

INSTALLING OUTDOOR UNITS INDOORS

Provide a means to drain the condensate generated during heating mode and defrost cycle in addition to rainwater that infiltrates the inlet louver enclosed area.

- Install a field-provided drain pan under the outdoor units and provide a path to a nearby floor drain.
- If the ambient air temperature is expected to drop below 32°F in the enclosure, heat the bottom surface of the pan, drain line, and floor drain so that the condensate does not freeze before reaching the drain.

Allow for ventilation intake and exhaust air based on maximum outdoor unit fan capacity.

- Select the size, type and orientation of architectural louvers with adequate "net free area" face velocity to ensure the total external static pressure from the outdoor unit fan does not exceed design limitations (see specification data tables).
- ⚠ No obstructions must be placed in front of the louver that could hamper the free flow (throw) of air.
- Roof top openings and / or discharge and supply louvers must be equipped with screens to prevent bird and insect infiltration.

As always, the best solution for each project balances acceptable heating performance (considering local weather conditions), capital costs, life cycle energy consumption, and limitations set forth by local building codes.

REFRIGERANT PIPING DESIGN

Design Guideline Summary

Device Connection Limitations

A single-zone ceiling-concealed ducted system consists of one outdoor unit and one indoor unit. One of the most critical elements of a single-zone ceiling-concealed ducted system is the refrigerant piping. The table below lists pipe length limits that must be followed in the design of a single-zone ceiling-concealed ducted refrigerant pipe system:

Table 37: Single-Zone Ceiling-Concealed Ducted Refrigerant Piping System Limitations.

System Model Name		LH248HV	LH368HV
Pipe Length (ELF = Equivalent Length of Pipe)	Longest total equivalent piping length	164 feet	246 feet
	Shortest total equivalent piping length	16.4	16.4
	Distance between fittings and indoor or outdoor units	≥20 inches	≥20 inches
	No additional refrigerant	25 feet	25 feet
Elevation (All Elevation Limitations are Measured in Actual Feet)	If outdoor unit is above indoor unit	98 feet	98 feet
	If outdoor unit is below indoor unit	98 feet	98 feet
Additional Refrigerant Needed (oz/ft)		0.43	0.43

System Layout

Figure 47: Typical LH248HV System Layout.


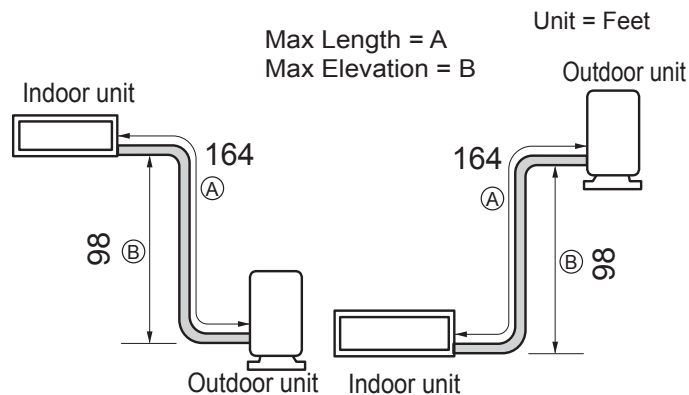


Figure 48: Typical LH368HV System Layout.



Inverter

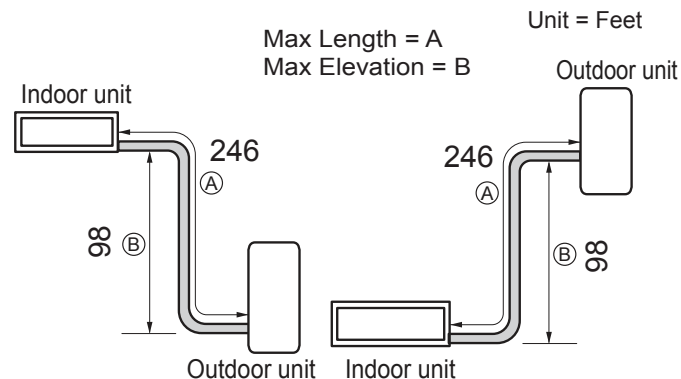

LG Electronics, U.S.A., Inc.
Air Conditioning Technologies
4300 North Point Parkway
Alpharetta, Georgia 30022
www.lghvac.com

EM_SZ_HighStatic_Ducted_08_23
Supersedes: EM_SZ_Ducted_06_23
EM_SZ_Ducted_12_22
EM_SZ_Ducted_07_21
EM_SZ_Ducted_09_19
EM_SZ_Ducted_12_18
EM_SZ_Ducted_11_18
EM_SZ_Ducted_8_17
EM_SZ_Ducted_5_16
DFS-EM-AM-001-US_014D02